

 
next

KENDALL CRNTV

103661

Assembly instructions

Actual product size
H50 x W112 x D45cm

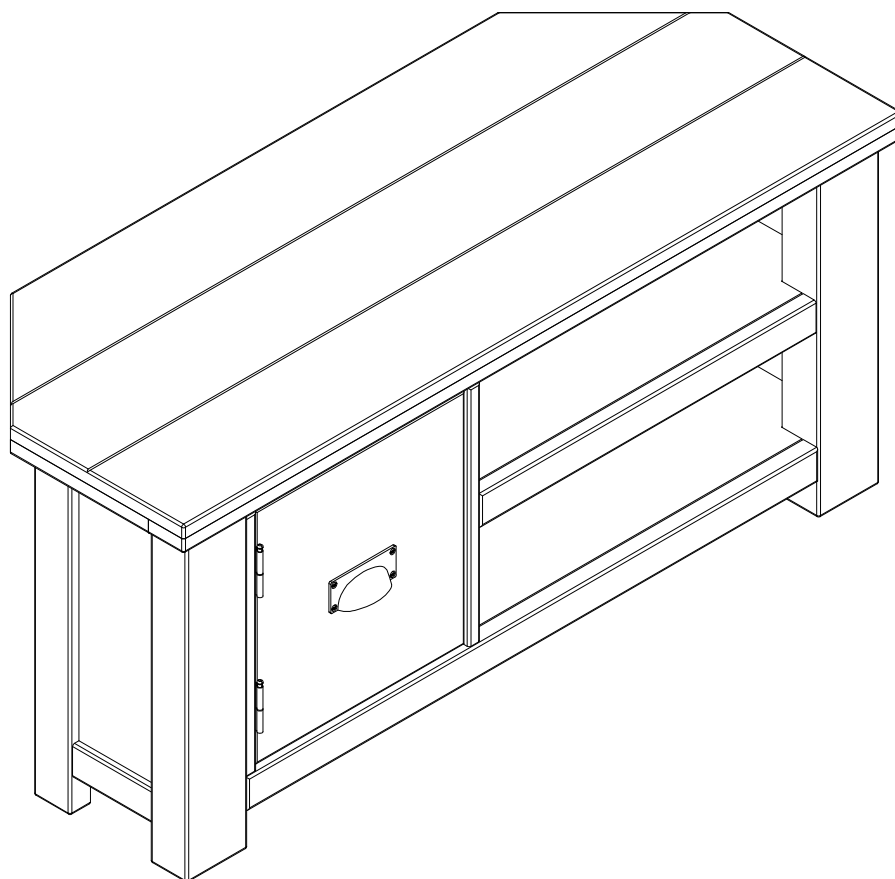

Need Help?

 
With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT – RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Number of people required to assemble

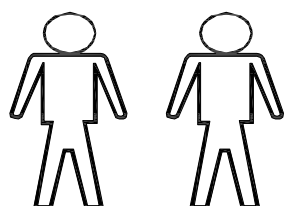


Time to assemble



15 min

 Tools required

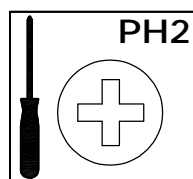

×2

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of the product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

 
Do not drag or pull your furniture.

Do not use silicone based furniture polish, Silicone in furniture polishes can break down the lacquer finish,

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. please make sure you use a placemat or coaster.

GETTING TO KNOW YOUR PRODUCT

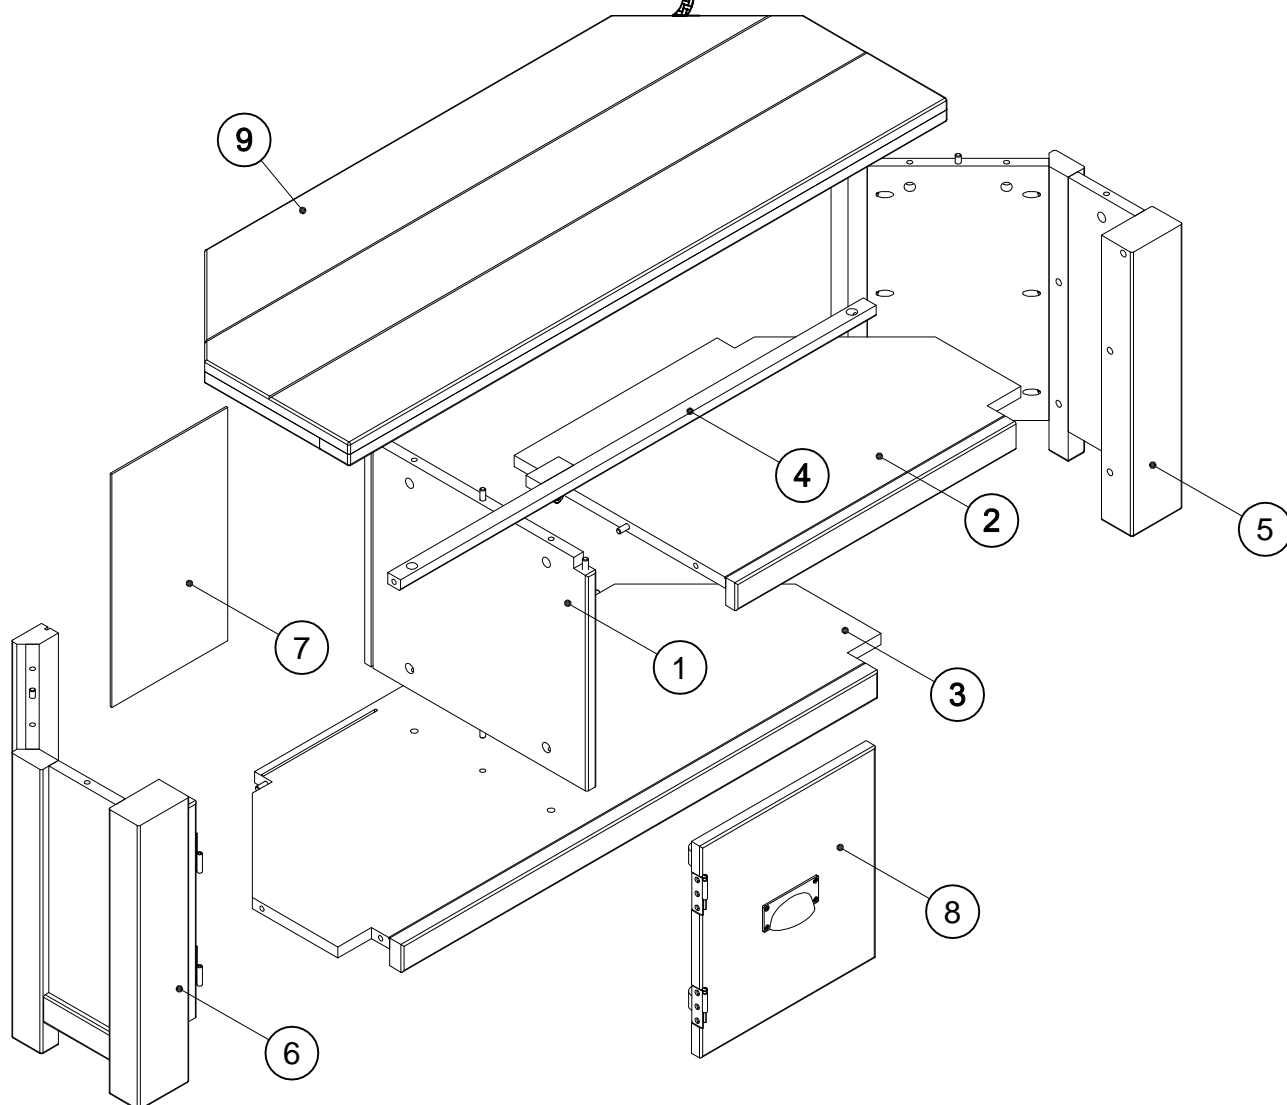


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	41.6×36.7cm		1	1
2	58.6×41.6cm		1	1
3	101.6×42cm		1	1
4	89×5.2cm		1	1
5	42×23.8cm		1	1


Ref	Dimensions	Visual	Qty	Ctn
6	42×23.8cm		1	1
7	37.8×21.7cm		1	1
8	32.7×34.3cm		1	1
9	112×45cm		1	1

Fixtures and fittings
supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
101	10×43.5mm	20	2
201	15×12mm	20	2

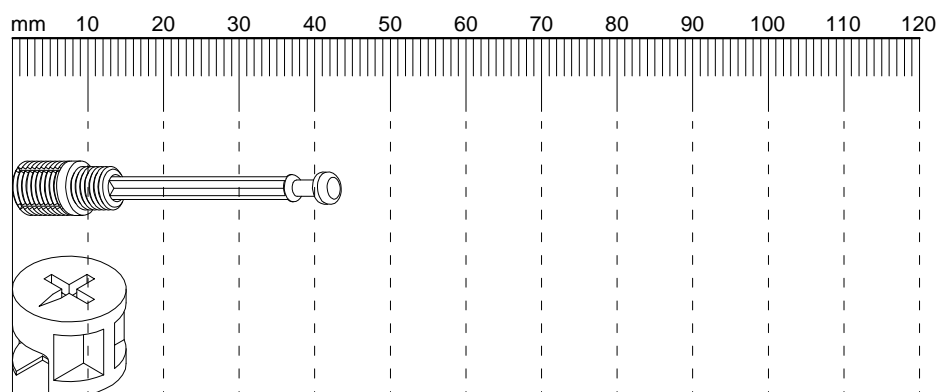 


1

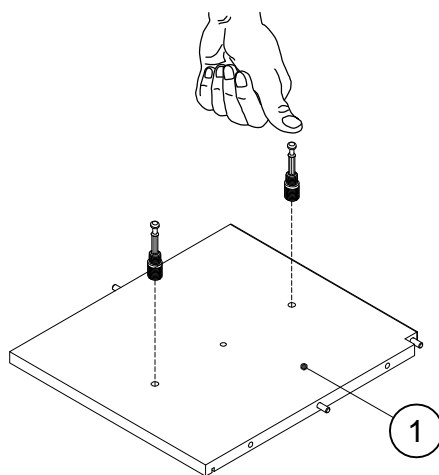 

CAM-LOCK

 Push in until shoulder sits flush with panel

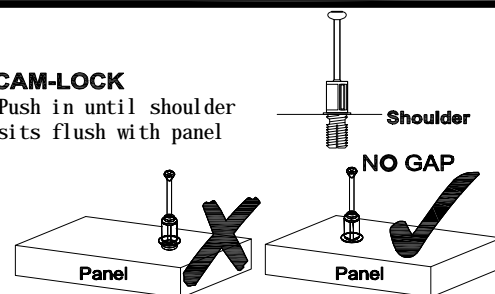


101x 2

10 x 43.5mm



 2

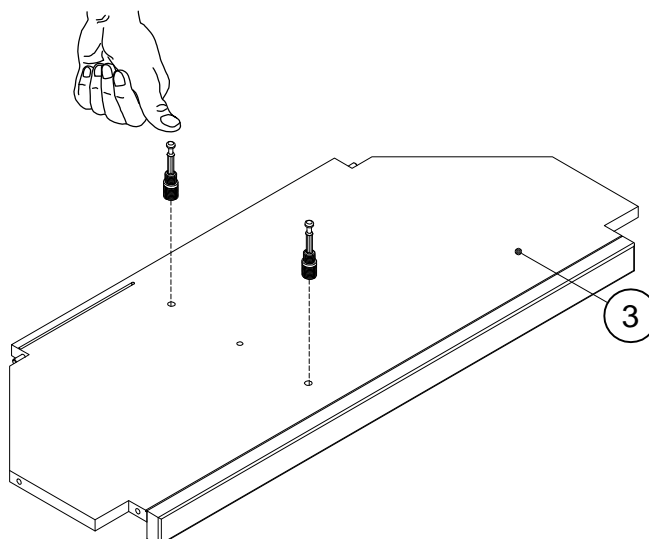


101x 2

10 x 43.5mm



 
3

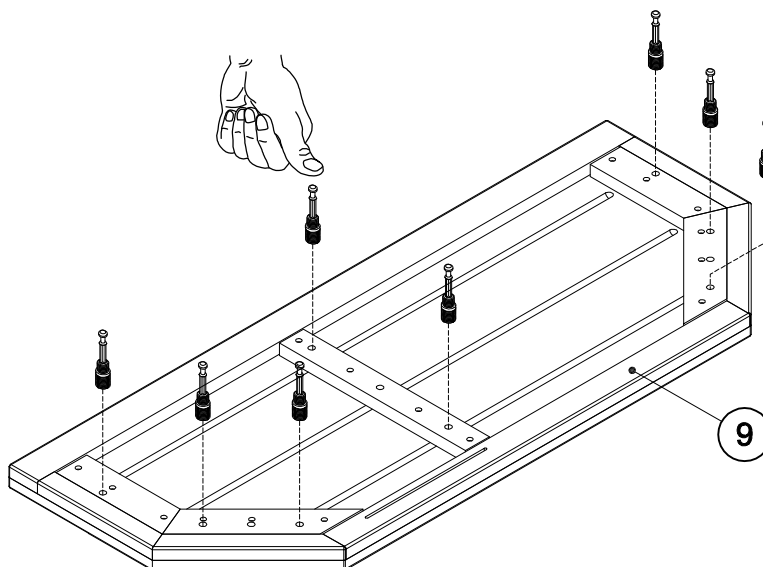

101x 8 10 x 43.5mm



 
4

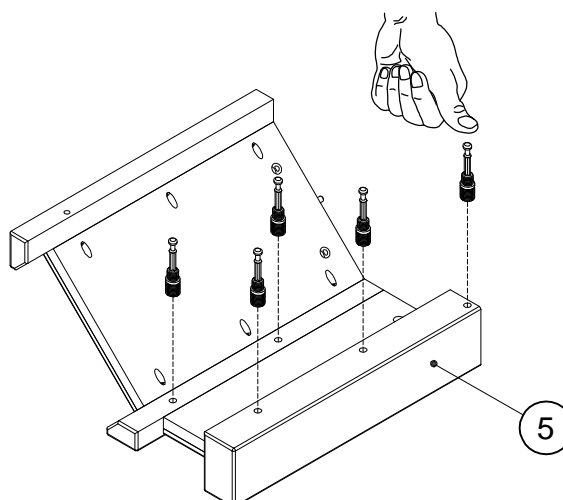

101x 5 10 x 43.5mm



 
5

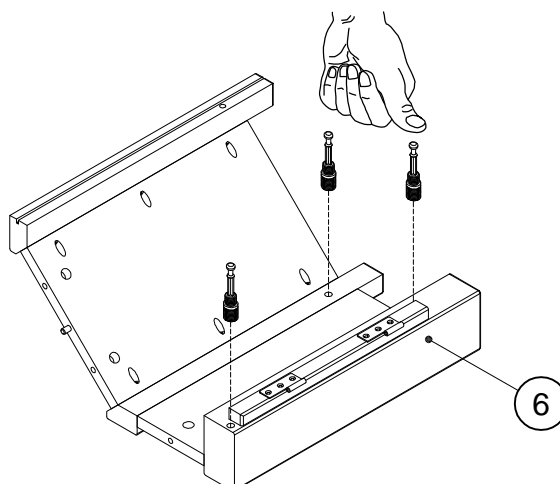

101x 3 10 x 43.5mm



 6

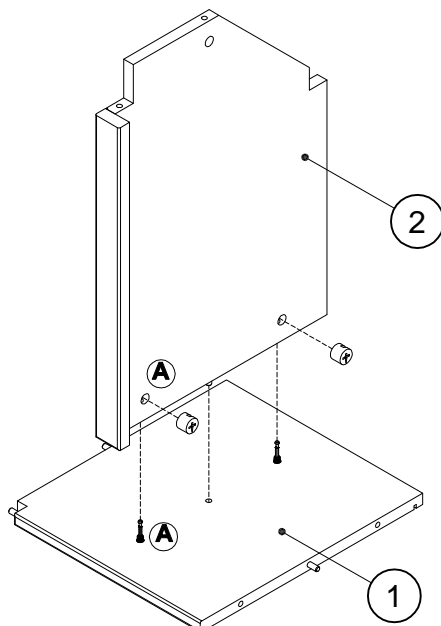

WHEN TIGHTENING THE CAM

TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITIONS SHOWN IN THE DIAGRAMS BELOW



START



MINIMUM
LOCK



MAXIMUM
LOCK

 


201 x2

15x12mm



7

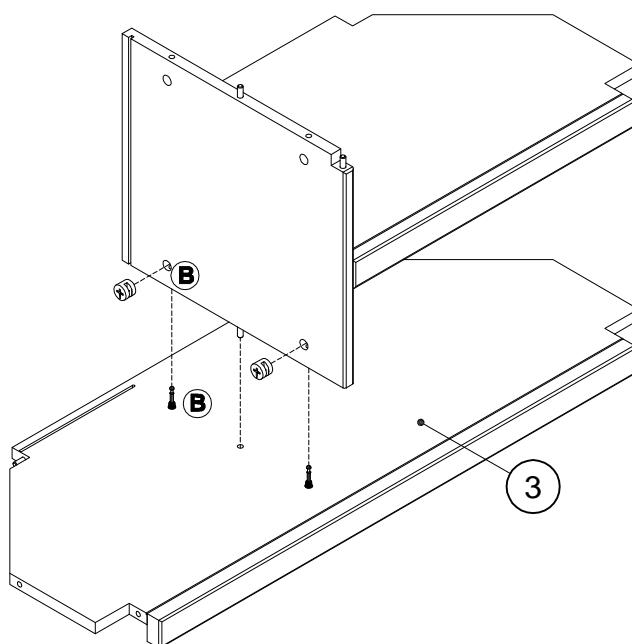


201 x2


15x12mm



 
8

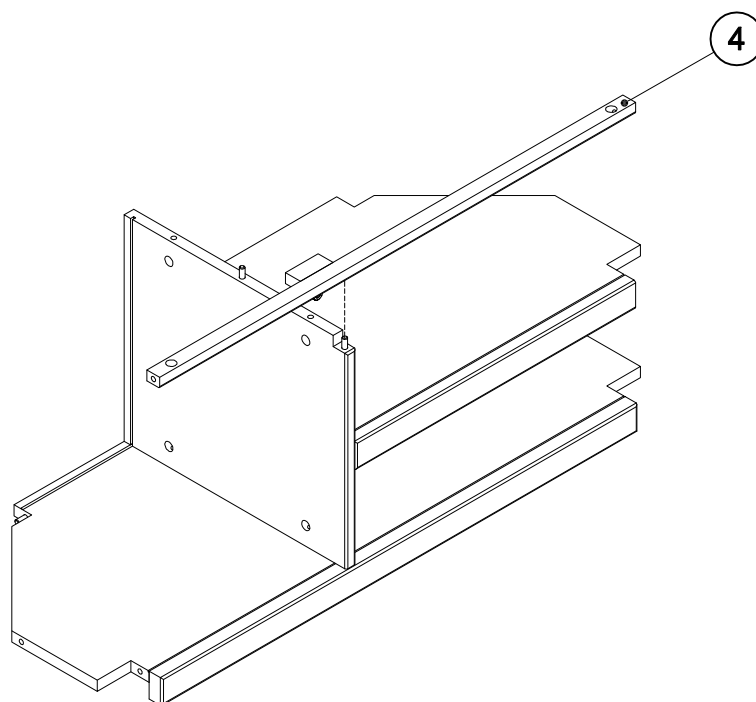

9

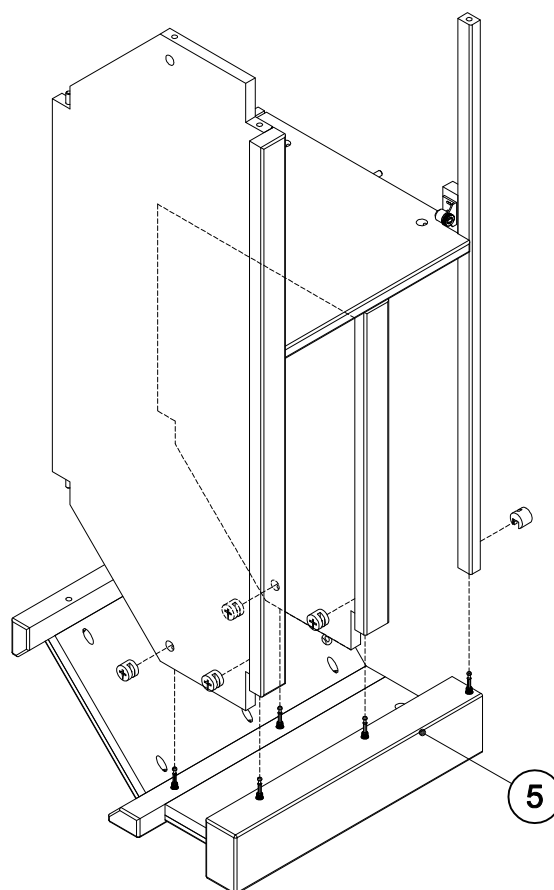 

10

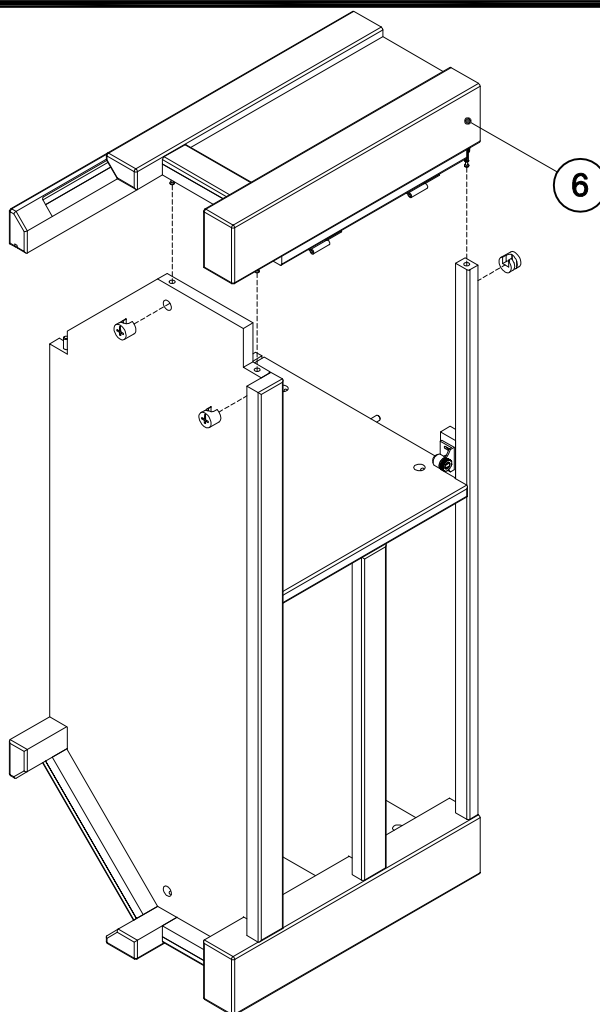 


201 x3

15x12mm




not supplied

 
11

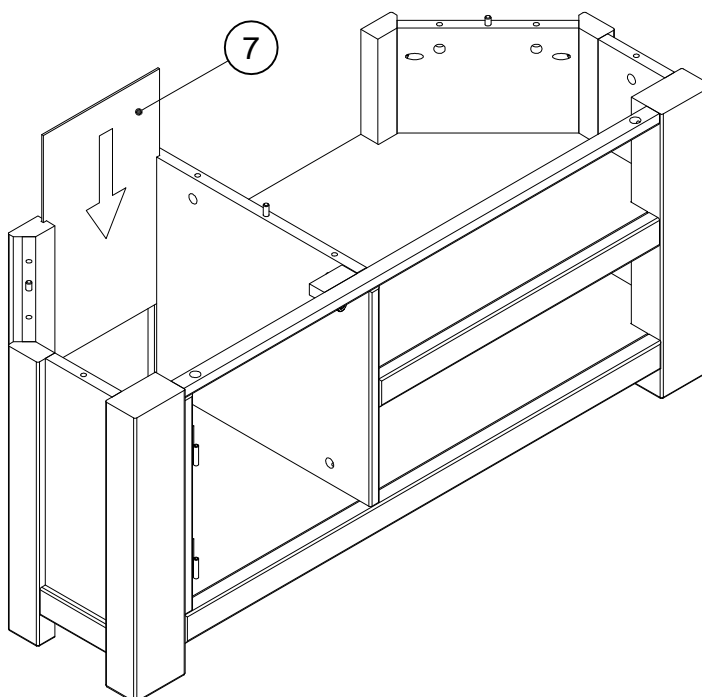

12

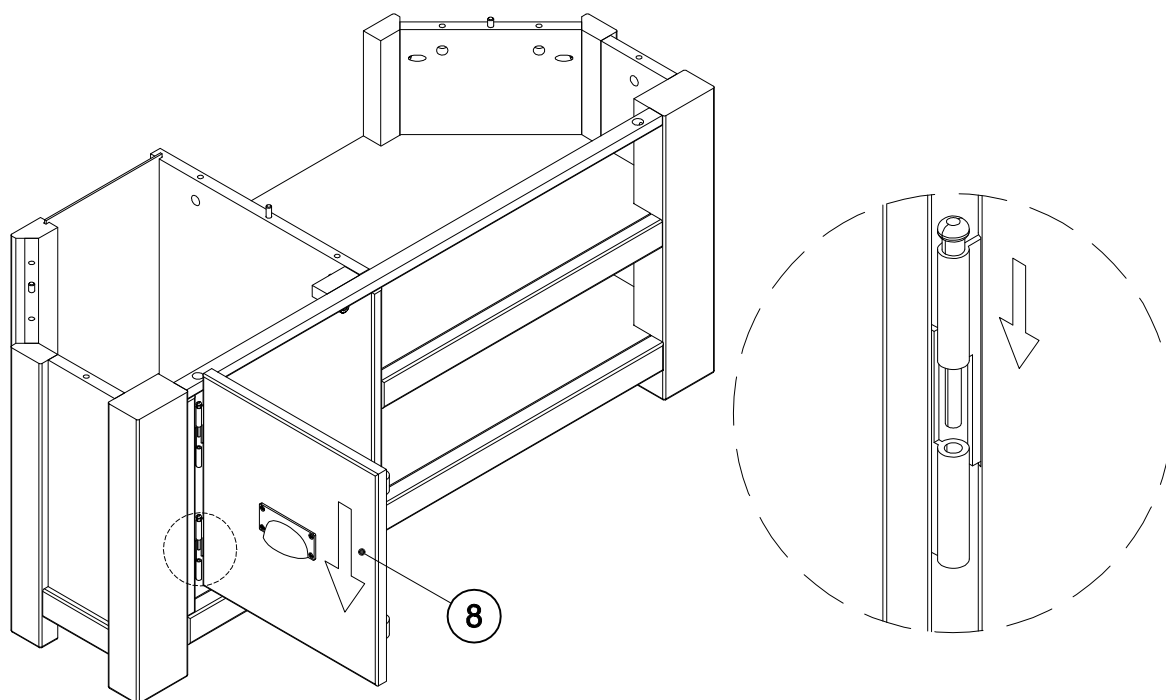 

13


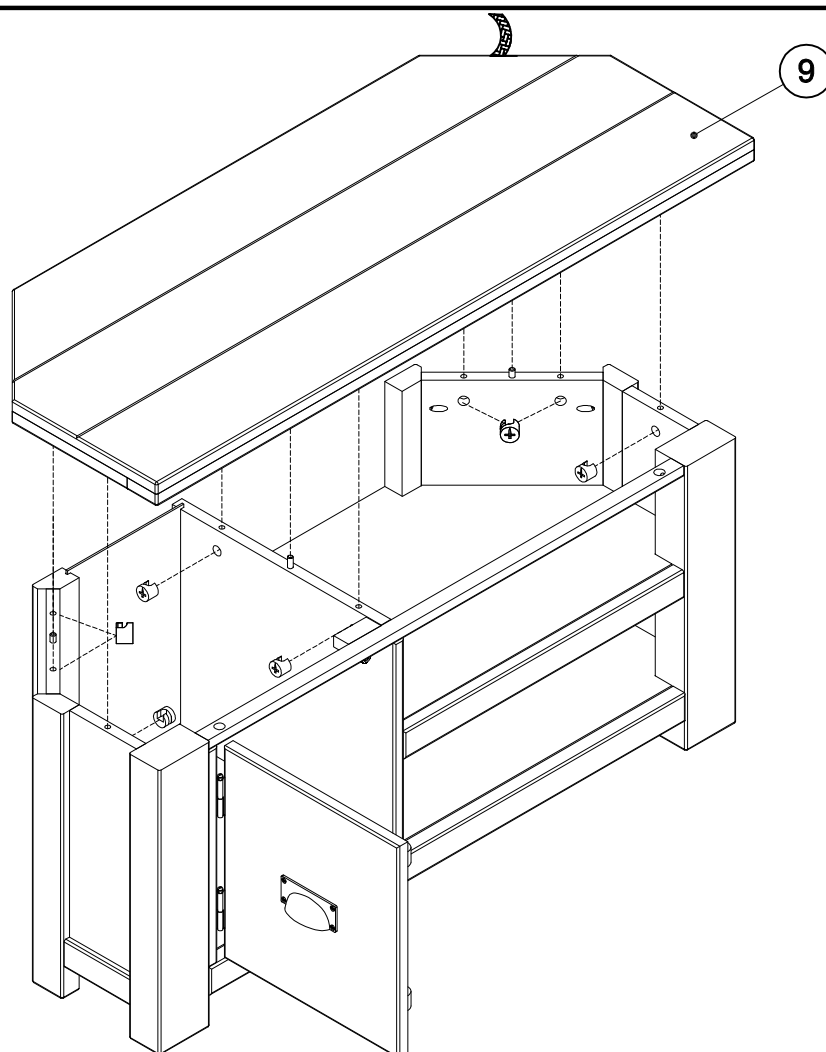 


14



1. Move the item into position and attach the end of the strap to the wall with the appropriate screw, washer and wall plug for your wall type .
2. **WARNING:** Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.
3. **NOTE:** Wall fixings are not included , please source suitable fixings for your wall type, if in doubt, please consult a qualified tradesman.

  
Wall



next

KENDALL CRNTV

 103661

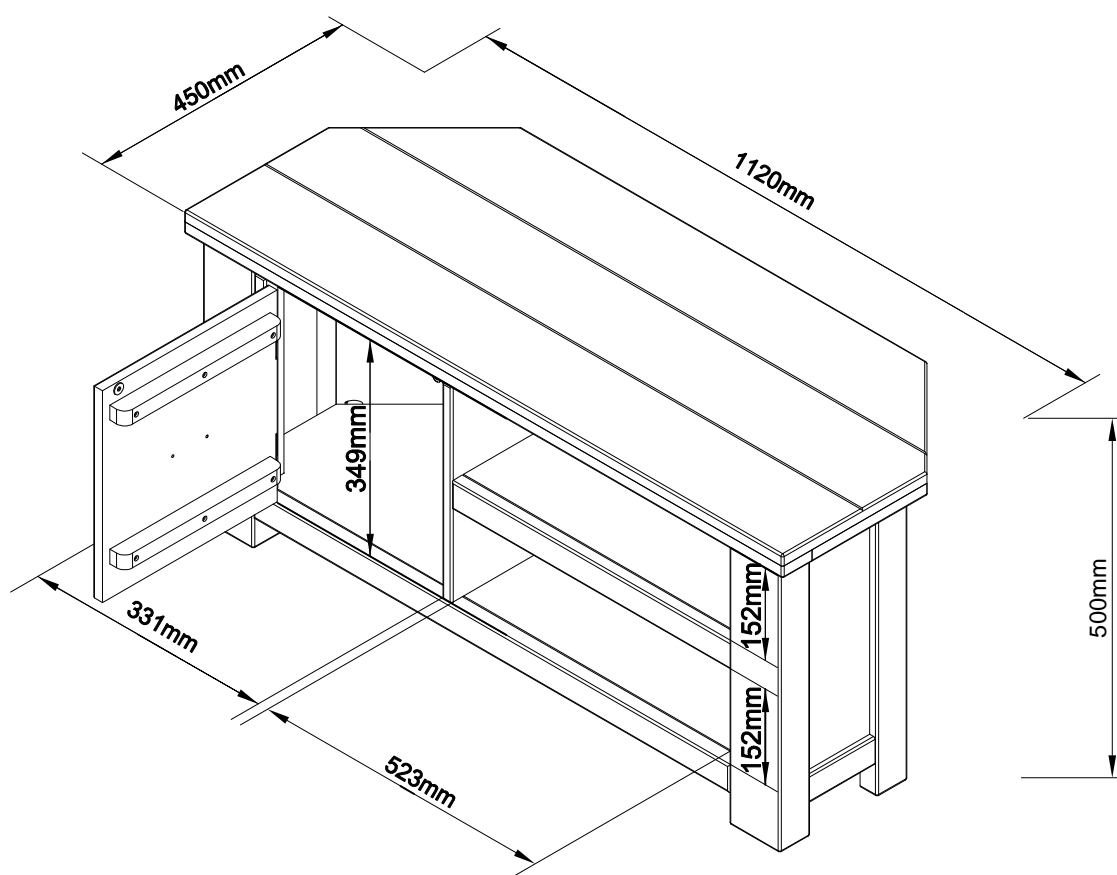

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from the construction are .

This product should only be used on firm,level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on **0333 777 8999** and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product please contact our customer service team on **0333 777 8999** If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services

Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk

PRODUCT SUPPLIED WITH WALL FIXING STRAPS