

# BEFORE YOU GET STARTED...

*We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together. So, let's quickly run through these three steps:*

## 1. COLOUR

Make sure you're happy with the colour  
No need to unpack everything, just check the first component.

## 2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

## 3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

## TIPS FOR RETURNS

Not completely happy with the product? No problem. We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.

next  
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

Thank you for choosing your upholstery from Next. Next Home has created an exclusive collection of upholstery and this leaflet is designed to help you prolong the life of your new sofa. Please read this leaflet and keep it for future reference.

**Upon delivery please inspect your upholstery thoroughly;**

If for any reason you are unhappy with the product please telephone our customer services department for further advice:

Home Customer Services: **0333 777 8999**

This does not affect your statutory rights

## FRAMES

Next upholstery frames are constructed of wood taken from managed sources or plantations. All frames comply with European standards for strength and stability.

## FABRICS AND FILLINGS

All covers and fillings comply with the Furniture and Furnishings (Fire) (Safety) Regulations 1988 (as amended). All fabrics comply with appropriate British and European Standards.

Unless otherwise stated in the Directory, Next upholstery is treated with a soil and stain resistant treatment.

Next Upholstery is designed and made for domestic use only.

## CLEANING AND CARING FOR YOUR UPHOLSTERY

### REGULAR CLEANING

Vacuum clean your upholstery at least once a week on a low setting, the removal of dust may be improved by pre-brushing with a soft brush. Accumulated dirt will accelerate wear and tear.

### FIXED COVERS

We recommend that your fixed cover sofa is professionally cleaned in situ. Cushion covers, scatter cushions and arm caps should only be cleaned in situ (unless the care label on the product states otherwise). Zips on cushions are for ease of manufacture only.

### CARE OF CUSHIONS

Reversible cushions should be turned regularly; switch position of cushions where possible as this will reduce soiling and promote even wear. Plump back and seat cushions daily.

### GENERAL USAGE

Your upholstery is designed to be sat on in comfort. In order to maintain the appearance and shape of your sofa avoid sitting on the arms or back. Take care not to snag fabric with sharp edged toys, buckles, jewellery or by allowing pets to claw furniture to prevent permanent damage to your upholstery.

### PROLONGED SUNLIGHT

It is not advisable to expose upholstery to direct sunlight for prolonged periods as this may result in the fabric fading. Protect your upholstery by drawing curtains or blinds.

### PILE FABRICS (velvet, chenille etc)

Due to the nature of the fabric construction, pile fabrics will be subject to some creasing, crushing and shading in use. This is a characteristic of these fabric types and not considered as a fault. Velvets would benefit from light brushing with a soft brush to maintain pile appearance.

## LOOSE COVERS

Before washing or cleaning ensure that valance rods are removed and follow the instructions shown on the sewn in care label. When covers are washable, do not soak, do not tumble dry, do not exceed 40°C and always use a 'Colour' washing detergent (optical brighteners will fade your fabric). Always clean your set of covers at the same time or in consecutive loads, (do not overload the washing machine). Wash covers inside out and iron whilst damp if permitted. Fit covers back onto the frame whilst slightly damp and tension the seams to fit.

## HOW TO DRESS LOOSE COVERS

In order to maintain a tidy appearance during use and after cleaning your loose covers will require regular-adjustment (re-dressing). Follow the steps below:

Step 1: Remove the seat and back cushions. Find the two top back corners of your loose cover and standing behind your sofa, place these over the top back corners of the sofa.

Step 2: Gently pull the arms of the cover down each arm in turn.

Step 3: Insert valance rods (where applicable). Loosely pull the cover over the front of the seat platform.

Step 4: Starting at the top of the back of the sofa ensure the seam in the cover runs along the outside back edge of the sofa back and gently smooth the inside back down to the seat platform.

Step 5: Ensure the arms are fitted squarely with the seams following the edges of the arms.

Step 6: Neaten the cover ensuring it is securely attached to the Velcro (where fitted) under the arms and the back of the frame to minimise any movement of the cover during use. Fasten zips and tighten ties (where applicable), this will help to improve the fit around the frame.

Step 7: Gently smooth the cover over the seat area, tucking excess fabric in around the seat platform and from the top back and inside edges of arms tuck excess fabric into the recess provided.

Step 8: Re-fit the valance rods (where applicable).

Step 9: Ensure cushion cover seams are in line with cushion edges and fibre filled cushions are well plumped, replace cushions as necessary.

## CARING FOR FABRICS TREATED WITH SOIL AND STAIN RESIST TREATMENTS

Clean up spills immediately. The longer spills are allowed to remain, the more difficult they are to remove. Use an absorbent cloth, facial tissue or sponge to blot up spots and spills. Be careful not to rub the stain deeper into the fabric. If the spill is solid or semi-solid (like butter or ketchup) remove the excess by gently lifting it off with a blunt knife or spatula. Often gentle blotting will remove all traces, but if the spillage mark cannot be removed completely, use the appropriate spot cleaning technique listed below.

**Note:** Before using any stain removing agent it should be tested. The test should be carried out on a hidden area of the fabric to ensure that it is colourfast and will not damage the fabric. With velvet upholstery it is advisable to spot clean, wiping in the direction of the pile (so that the pile lays down). When the fabric is dry, brush gently, first against, then with the pile. Never try to remove stains with household detergents such as washing up liquid.

## WATER BASED STAINS

Water based stains (including ketchup, soft drinks, wine and alcoholic beverages) should be removed using a good proprietary brand upholstery shampoo. Follow the manufacturers directions and do not exceed the recommended dilution rates. Use a new clean absorbent cloth, turn the cloth frequently to expose a clean surface, use a dabbing action rather than rubbing or scrubbing, use mixture sparingly, work from the outer edge of the stain towards its centre to prevent spreading. Always rinse out upholstery shampoo with warm (not hot) water.

## OIL BASED STAINS

Oil based stains (including salad dressing, butter and greasy foods) should be cleaned with a spot remover containing dry cleaning fluid, which may be obtained from most supermarkets and hardware shops, follow the manufacturers instructions. Use a new clean absorbent cloth to apply the fluid, dab the stain from the outer edge towards the centre of the stain, do not rub or scrub as this will spread the spillage.

next

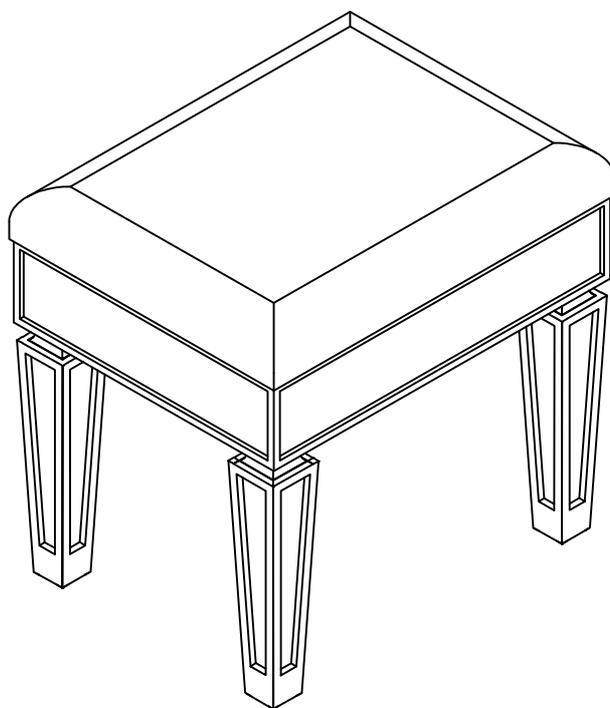
# FLEUR STOOL

707896

Assembly instructions

## Actual product size

H46.5xW45xD35cm



## Need Help?

With: Assembly instructions  
Missing or damaged parts

CALL:0333 777 8999

**IMPORTANT- RETAIN FOR FUTURE REFERENCE**

### BEFORE YOU START

#### Warnings

We suggest you retain these instructions for future reference

Keep fittings out of children's reach and keep children well away from the construction area

This product should only be used on firm, level ground

For self-assembled products, please periodically check all fittings and re-tighten as necessary

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

#### Do's

We suggest you spend a short time reading through this leaflet before you start

When you are ready to start, make sure that you have the right tools and plenty of space

Unwrap all packaging materials and place the components on a clean surface to protect it from damage

For self-assembled products, we recommend that the packaging is used to protect the surfaces during assembly

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is unpacked in the room intended for use

If the glass is chipped or broken, stop using the product and consult the supplier

When cleaning glass panels use a damp cloth with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these substances scratch glass panel

The product complies with **BS EN 12520**

#### Don'ts

Do not drag or pull your furniture

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish

Do not place very hot or very cold items on the glass surface, unless adequately thick table mats or coasters are used to prevent such items from coming into contact with the glass

Do not use glass as a chopping surface. Do not strike the glass with hard or pointed items

#### Number of people required to assemble

1 persons to assembly

#### Time to Assemble



30 minutes

#### Missing parts

If you are missing any fixtures and fitting for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

#### Home service technicians

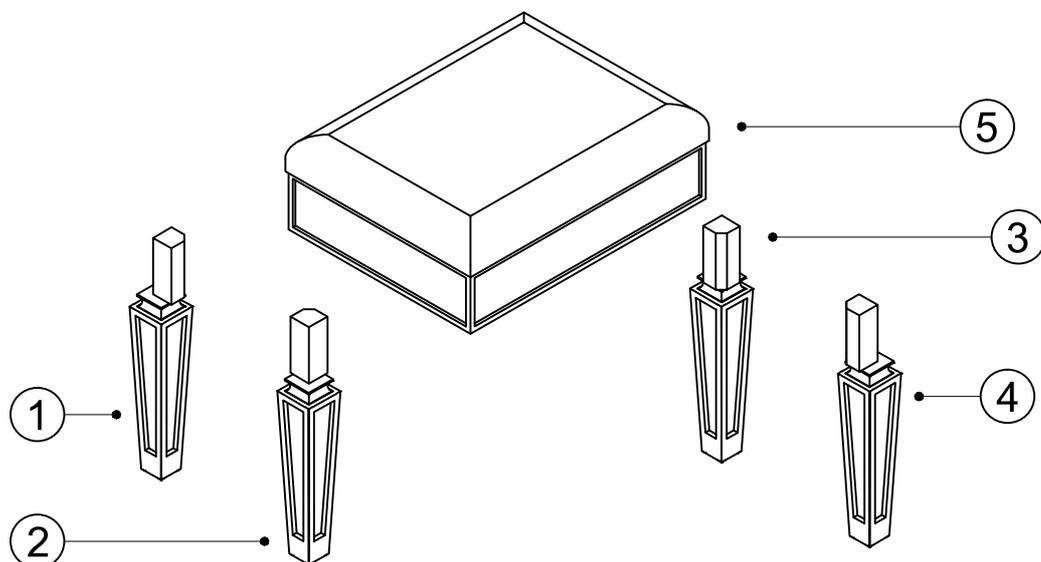
If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

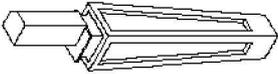
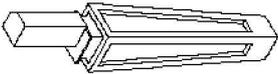
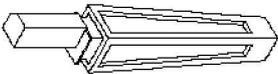
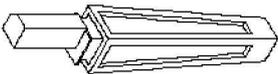
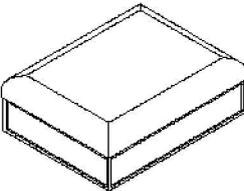
#### You can write to us at

Home Customer services  
Next Retail Ltd,  
Desford Road  
Leicester  
LE19 4AT

To view our full furniture range please visit  
[www.next.co.uk](http://www.next.co.uk)

**GETTING TO KNOW YOUR PRODUCT**



Ref	Dimensions	visual	Qty
1	29.8x6x6cm		1
2	29.8x6x6cm		1
3	29.8x6x6cm		1
4	29.8x6x6cm		1
5	45x35x13cm		1


Fixture and Fittings supplied(actual size)


REF	DIMENSIONS	QTY	Spare Part*	
B	80x30MM	1	0	
C	12x43MM	8	1	
D	12x2.5MM	8	1	
E	19x1.5MM	8	1	

\* Just to let you know we have included a small quantity of fixings in case of mishap,

• [A] [B] [C] [D] [E] [F] [G] [H] [I] [J] [K] [L] [M] [N] [O] [P] [Q] [R] [S] [T] [U] [V] [W] [X] [Y] [Z] [AA] [AB] [AC] [AD] [AE] [AF] [AG] [AH] [AI] [AJ] [AK] [AL] [AM] [AN] [AO] [AP] [AQ] [AR] [AS] [AT] [AU] [AV] [AW] [AX] [AY] [AZ] [BA] [BB] [BC] [BD] [BE] [BF] [BG] [BH] [BI] [BJ] [BK] [BL] [BM] [BN] [BO] [BP] [BQ] [BR] [BS] [BT] [BU] [BV] [BW] [BX] [BY] [BZ] [CA] [CB] [CC] [CD] [CE] [CF] [CG] [CH] [CI] [CJ] [CK] [CL] [CM] [CN] [CO] [CP] [CQ] [CR] [CS] [CT] [CU] [CV] [CW] [CX] [CY] [CZ] [DA] [DB] [DC] [DD] [DE] [DF] [DG] [DH] [DI] [DJ] [DK] [DL] [DM] [DN] [DO] [DP] [DQ] [DR] [DS] [DT] [DU] [DV] [DW] [DX] [DY] [DZ] [EA] [EB] [EC] [ED] [EE] [EF] [EG] [EH] [EI] [EJ] [EK] [EL] [EM] [EN] [EO] [EP] [EQ] [ER] [ES] [ET] [EU] [EV] [EW] [EX] [EY] [EZ] [FA] [FB] [FC] [FD] [FE] [FF] [FG] [FH] [FI] [FJ] [FK] [FL] [FM] [FN] [FO] [FP] [FQ] [FR] [FS] [FT] [FU] [FV] [FW] [FX] [FY] [FZ] [GA] [GB] [GC] [GD] [GE] [GF] [GG] [GH] [GI] [GJ] [GK] [GL] [GM] [GN] [GO] [GP] [GQ] [GR] [GS] [GT] [GU] [GV] [GW] [GX] [GY] [GZ] [HA] [HB] [HC] [HD] [HE] [HF] [HG] [HH] [HI] [HJ] [HK] [HL] [HM] [HN] [HO] [HP] [HQ] [HR] [HS] [HT] [HU] [HV] [HW] [HX] [HY] [HZ] [IA] [IB] [IC] [ID] [IE] [IF] [IG] [IH] [II] [IJ] [IK] [IL] [IM] [IN] [IO] [IP] [IQ] [IR] [IS] [IT] [IU] [IV] [IW] [IX] [IY] [IZ] [JA] [JB] [JC] [JD] [JE] [JF] [JG] [JH] [JI] [JJ] [JK] [JL] [JM] [JN] [JO] [JP] [JQ] [JR] [JS] [JT] [JU] [JV] [JW] [JX] [JY] [JZ] [KA] [KB] [KC] [KD] [KE] [KF] [KG] [KH] [KI] [KJ] [KK] [KL] [KM] [KN] [KO] [KP] [KQ] [KR] [KS] [KT] [KU] [KV] [KW] [KX] [KY] [KZ] [LA] [LB] [LC] [LD] [LE] [LF] [LG] [LH] [LI] [LJ] [LK] [LL] [LM] [LN] [LO] [LP] [LQ] [LR] [LS] [LT] [LU] [LV] [LW] [LX] [LY] [LZ] [MA] [MB] [MC] [MD] [ME] [MF] [MG] [MH] [MI] [MJ] [MK] [ML] [MN] [MO] [MP] [MQ] [MR] [MS] [MT] [MU] [MV] [MW] [MX] [MY] [MZ] [NA] [NB] [NC] [ND] [NE] [NF] [NG] [NH] [NI] [NJ] [NK] [NL] [NM] [NN] [NO] [NP] [NQ] [NR] [NS] [NT] [NU] [NV] [NW] [NX] [NY] [NZ] [OA] [OB] [OC] [OD] [OE] [OF] [OG] [OH] [OI] [OJ] [OK] [OL] [OM] [ON] [OO] [OP] [OQ] [OR] [OS] [OT] [OU] [OV] [OW] [OX] [OY] [OZ] [PA] [PB] [PC] [PD] [PE] [PF] [PG] [PH] [PI] [PJ] [PK] [PL] [PM] [PN] [PO] [PP] [PQ] [PR] [PS] [PT] [PU] [PV] [PW] [PX] [PY] [PZ] [QA] [QB] [QC] [QD] [QE] [QF] [QG] [QH] [QI] [QJ] [QK] [QL] [QM] [QN] [QO] [QP] [QQ] [QR] [QS] [QT] [QU] [QV] [QW] [QX] [QY] [QZ] [RA] [RB] [RC] [RD] [RE] [RF] [RG] [RH] [RI] [RJ] [RK] [RL] [RM] [RN] [RO] [RP] [RQ] [RR] [RS] [RT] [RU] [RV] [RW] [RX] [RY] [RZ] [SA] [SB] [SC] [SD] [SE] [SF] [SG] [SH] [SI] [SJ] [SK] [SL] [SM] [SN] [SO] [SP] [SQ] [SR] [SS] [ST] [SU] [SV] [SW] [SX] [SY] [SZ] [TA] [TB] [TC] [TD] [TE] [TF] [TG] [TH] [TI] [TJ] [TK] [TL] [TM] [TN] [TO] [TP] [TQ] [TR] [TS] [TT] [TU] [TV] [TW] [TX] [TY] [TZ] [UA] [UB] [UC] [UD] [UE] [UF] [UG] [UH] [UI] [UJ] [UK] [UL] [UM] [UN] [UO] [UP] [UQ] [UR] [US] [UT] [UU] [UV] [UW] [UX] [UY] [UZ] [VA] [VB] [VC] [VD] [VE] [VF] [VG] [VH] [VI] [VJ] [VK] [VL] [VM] [VN] [VO] [VP] [VQ] [VR] [VS] [VT] [VU] [VV] [VW] [VX] [VY] [VZ] [WA] [WB] [WC] [WD] [WE] [WF] [WG] [WH] [WI] [WJ] [WK] [WL] [WM] [WN] [WO] [WP] [WQ] [WR] [WS] [WT] [WU] [WV] [WW] [WX] [WY] [WZ] [XA] [XB] [XC] [XD] [XE] [XF] [XG] [XH] [XI] [XJ] [XK] [XL] [XM] [XN] [XO] [XP] [XQ] [XR] [XS] [XT] [XU] [XV] [XW] [XX] [XY] [XZ] [YA] [YB] [YC] [YD] [YE] [YF] [YG] [YH] [YI] [YJ] [YK] [YL] [YM] [YN] [YO] [YP] [YQ] [YR] [YS] [YT] [YU] [YV] [YW] [YX] [YY] [YZ] [ZA] [ZB] [ZC] [ZD] [ZE] [ZF] [ZG] [ZH] [ZI] [ZJ] [ZK] [ZL] [ZM] [ZN] [ZO] [ZP] [ZQ] [ZR] [ZS] [ZT] [ZU] [ZV] [ZW] [ZX] [ZY] [ZZ]

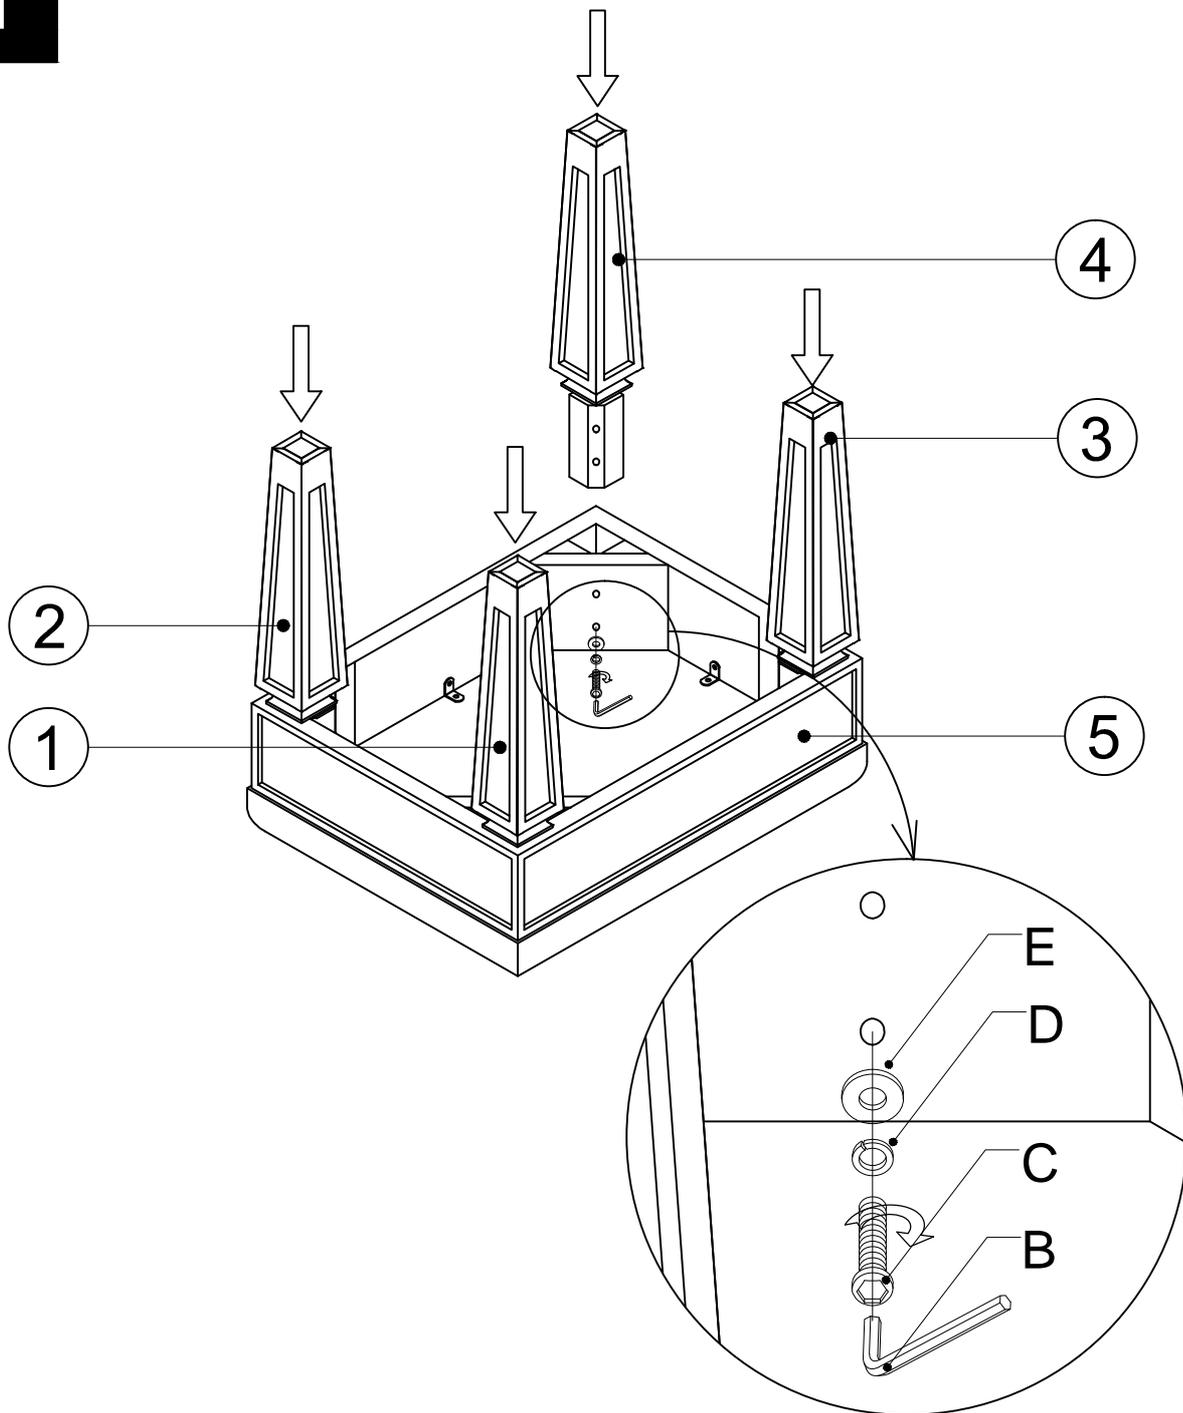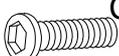1



 <p>80x30mm Bx1</p>	 <p>12x43mm Cx8</p>	 <p>12x2.5mm Dx8</p>	 <p>19x1.5mm Ex8</p>
--	--	---	---

next

# FLEUR STOOL

707896

Assembly instructions

## Actual product size

H46.5xW45xD35cm

