

next

COMPTON DESK

 
902979

Assembly instructions

Actual product size

H74 x W100 x D45cm

H48 x W100 x D15cm

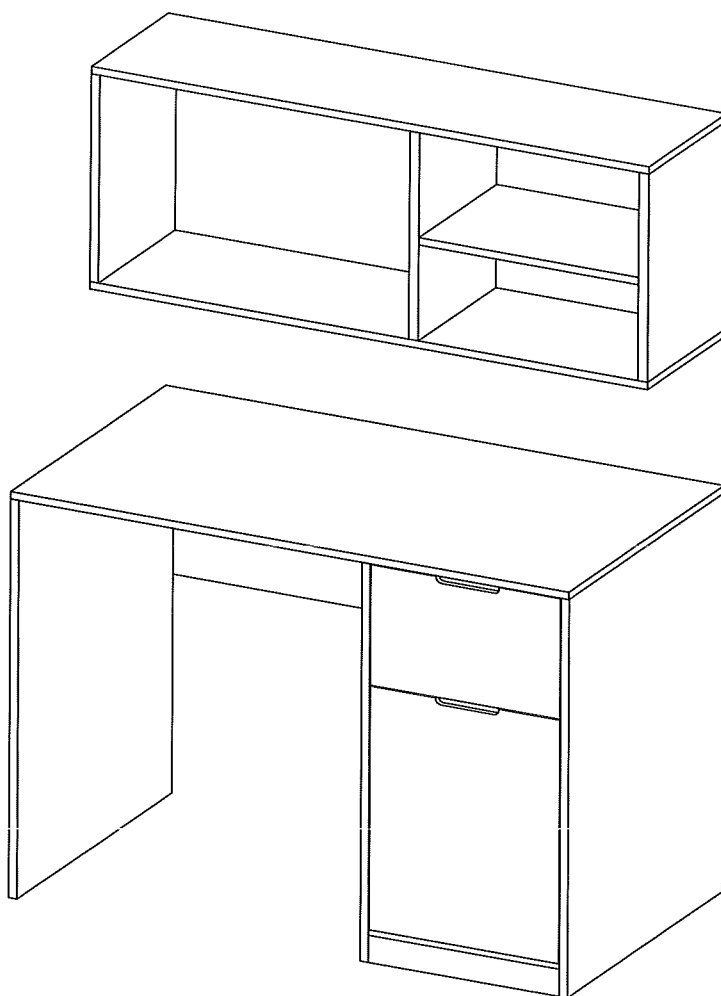

Need Help?

With: Assembly instructions
Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from the construction area.

This product should only be used on firm, level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

 
Number of people required to assemble

Two persons are required to assemble this item.


Time to assemble



Tools required

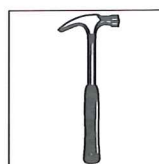

not supplied

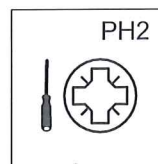 

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect them from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of the product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.

Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placement or coaster

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

 
If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at



 
 
 


 
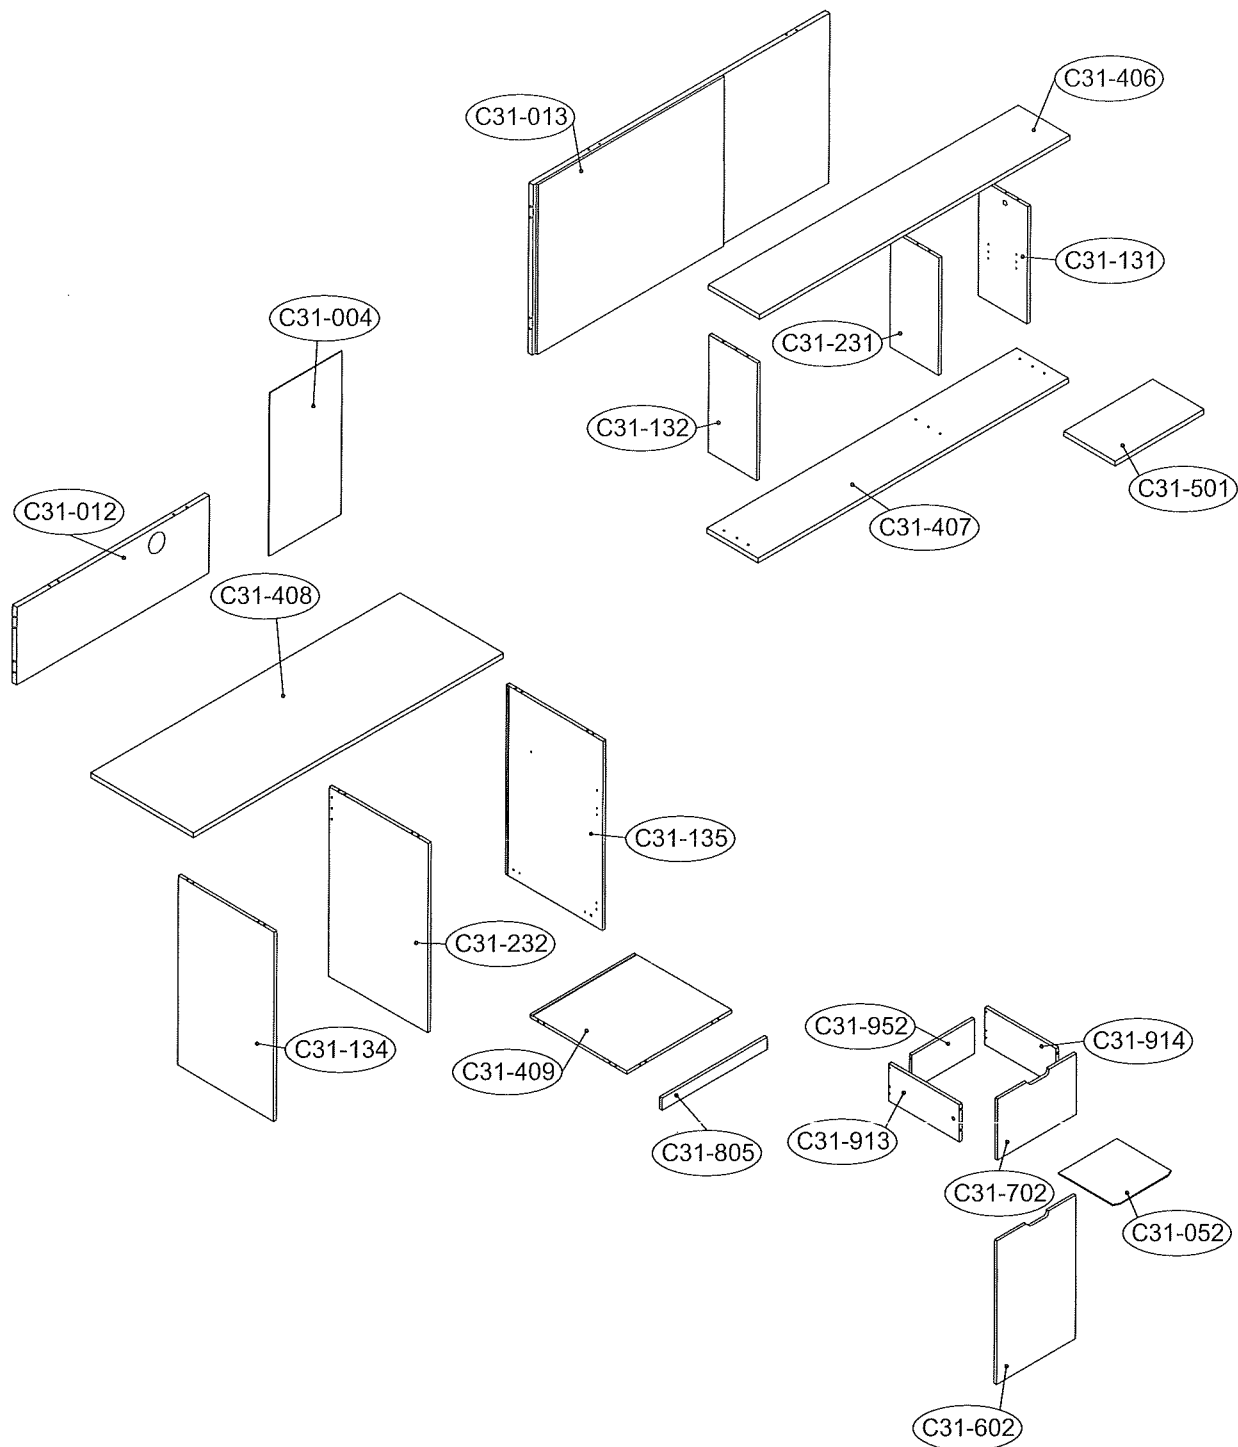 


 

 
 

 




Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

To View our full furniture range please visit www.next.co.uk

GETTING TO KNOW YOUR PRODUCT



 Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty/Ctn	
C31-406	100 x 15cm		1	1
C31-407	100 x 15cm		1	1
C31-132	44 x 15cm		1	2
C31-131	44 x 15cm		1	2
C31-231	44 x 13cm		1	2
C31-501	36 x 13cm		1	2
C31-013	96 x 42cm		1	1
C31-408	100 x 45cm		1	1
C31-409	36 x 42cm		1	1
C31-134	71 x 44cm		1	2
C31-135	71 x 44cm		1	2
C31-232	71 x 44cm		1	2
C31-602	40x 36cm		1	1
C31-702	36 x 25cm		1	1
C31-805	36 x 5cm		1	1
C31-913	33 x 14cm		1	2
C31-914	33 x 14cm		1	2
C31-952	31 x 14cm		1	2
C31-052	32 x 32cm		1	1
C31-004	66 x 37cm		1	1
C31-012	58 x 13cm		1	1

next

COMPTON DESK 902979 Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty
A	6 x 43 mm	32
B	15 x 11 mm	20
B2	15 x 12.5 mm	12
D	8 x 30 mm	42
F	6.3 x 13 mm	8
H1	5 x 15 mm	1
P4	3 x 20 mm	4
T	3 x 13 mm	2
T1	3.5 x 16 mm	4
Q	5 x 50 mm	6

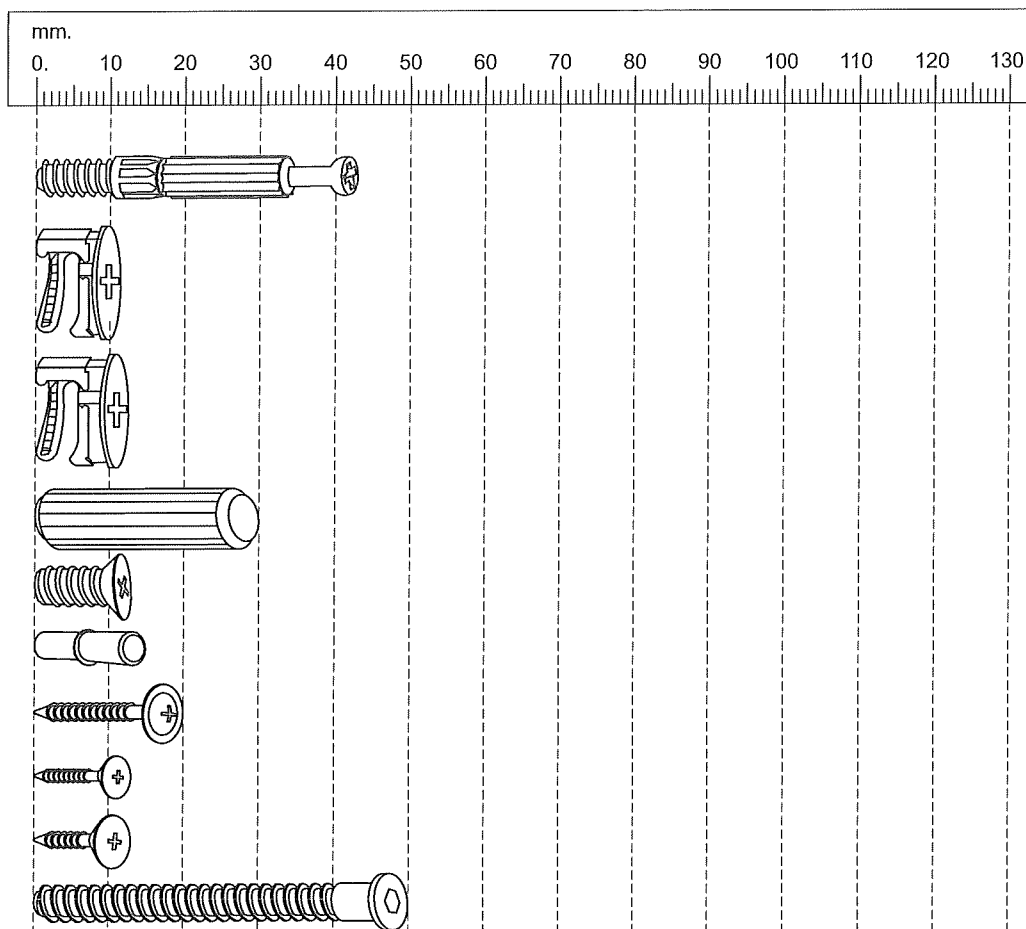 



Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Visual	Qty
E	N/A		6
Ref	Dimensions	Visual	Qty
H	N/A		4
Ref	Dimensions	Visual	Qty
I1	N/A		1
Ref	Dimensions	Visual	Qty
I2	N/A		2

Ref	Dimensions	Visual	Qty
J2	N/A		2
Ref	Dimensions	Visual	Qty
M	N/A		2
Ref	Dimensions	Visual	Qty
SL	N/A		1





Ref	Dimensions	Visual	Qty
SR	N/A		1
Ref	Dimensions	Visual	Qty
V	N/A		1
Ref	Dimensions	Visual	Qty
Y2	N/A		2

  1

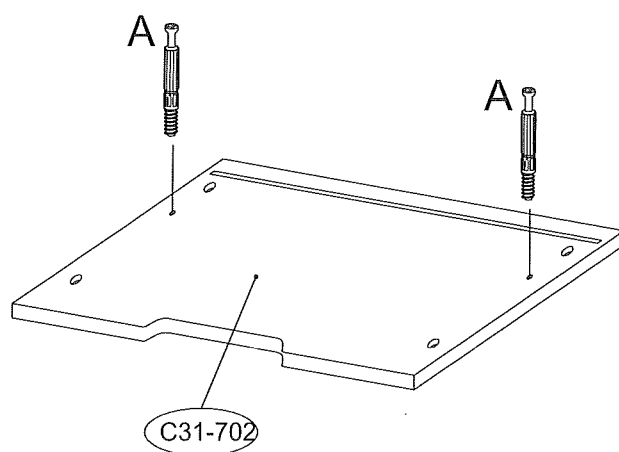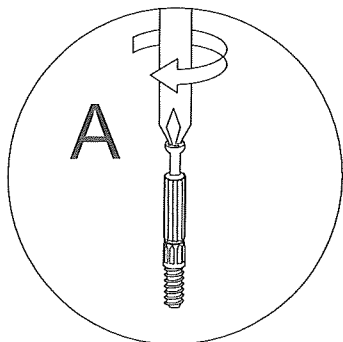

CAM-LOCK

    Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

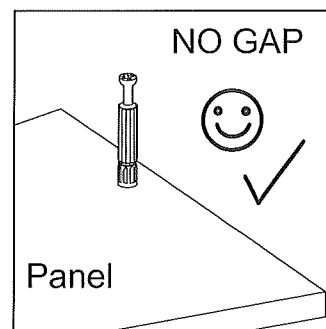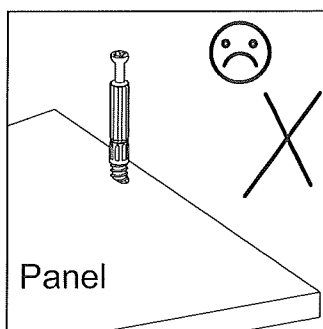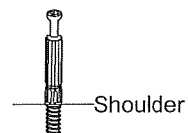



next

COMPTON DESK

902979


Assembly instructions

  2

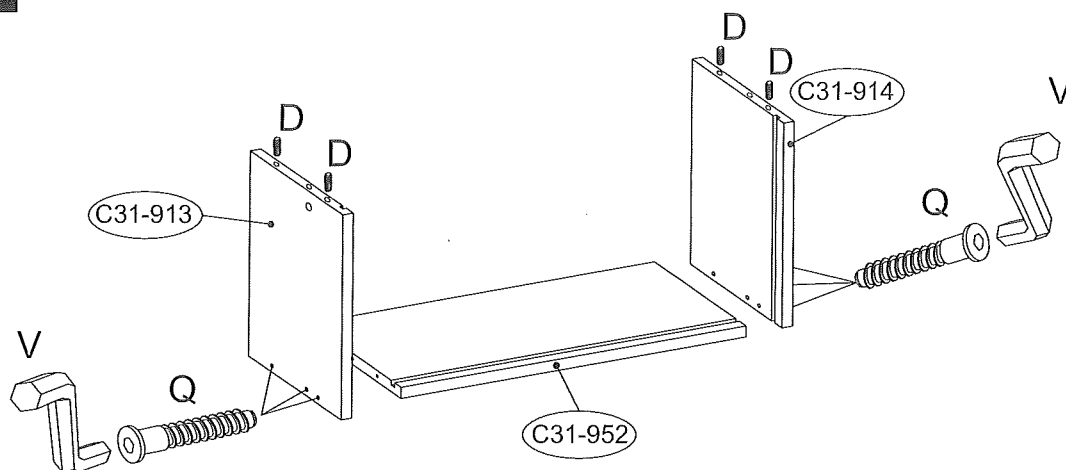

8x30mm

 Dx4




Vx1





Qx6



 
5x50mm



3

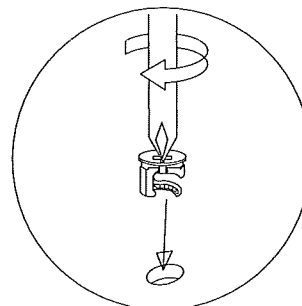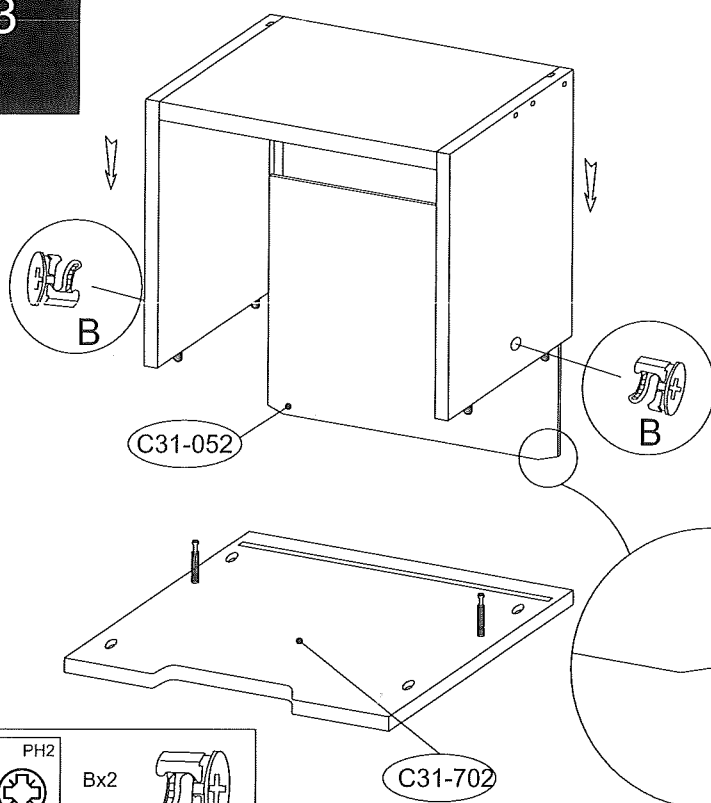  

   WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-PILLAR
TURN CLOCKWISE UNTIL SECURE

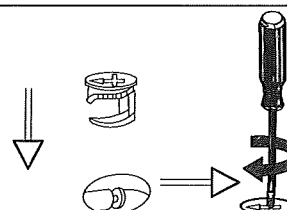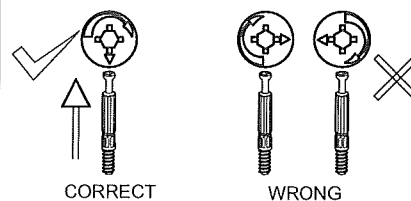

PH2

Bx2



 
 
C31-702

next




COMPTON DESK

902979
Assembly instructions

4

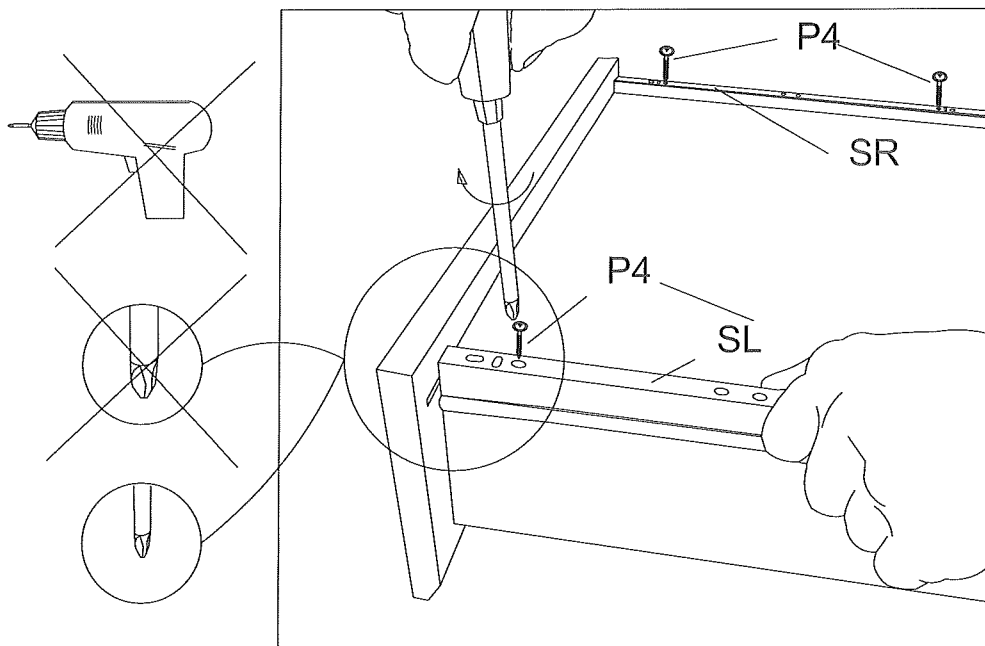

5

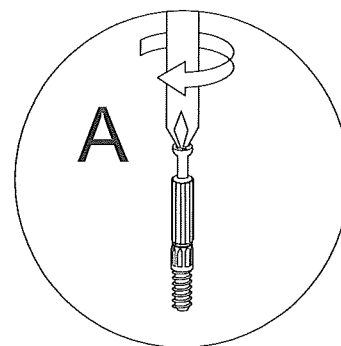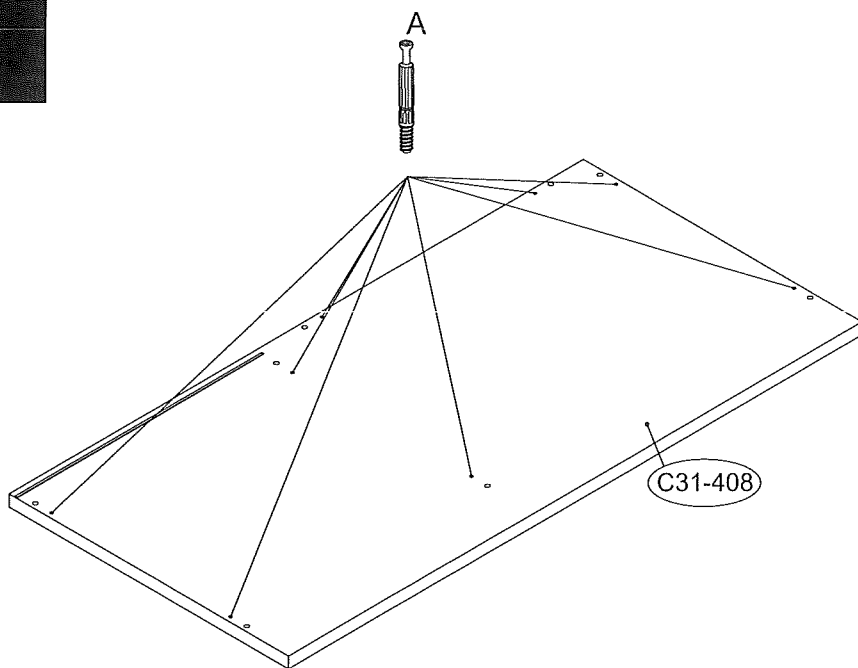   



next

COMPTON DESK



902979

Assembly instructions

  6

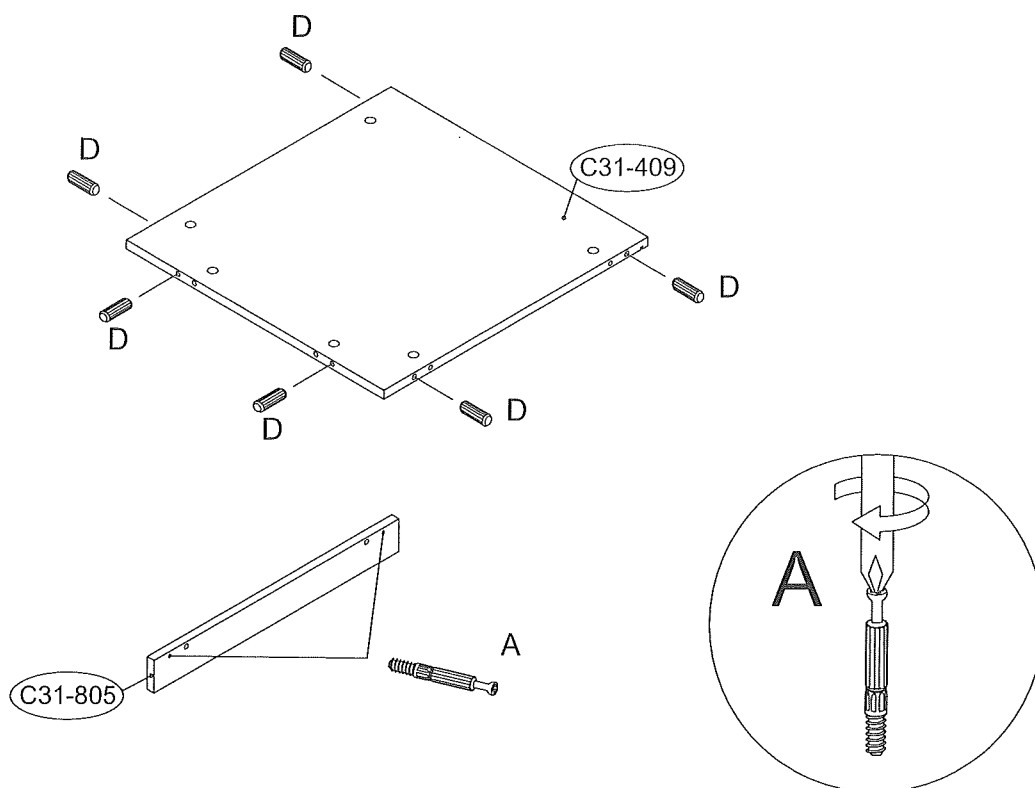

7

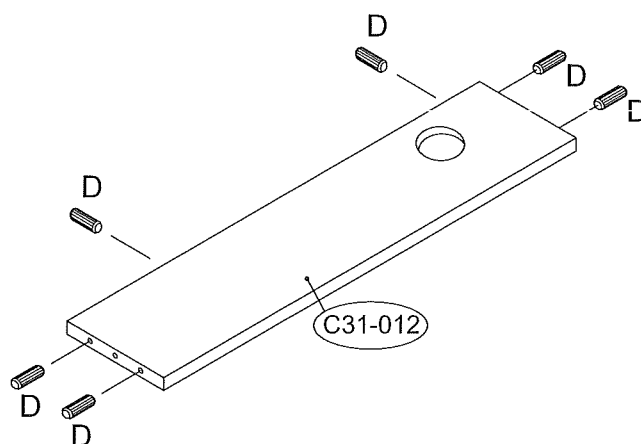  






next

COMPTON DESK





902979

Assembly instructions

    
 
8

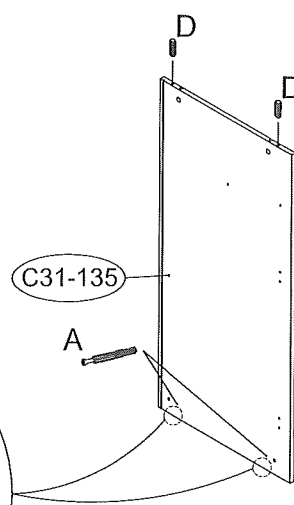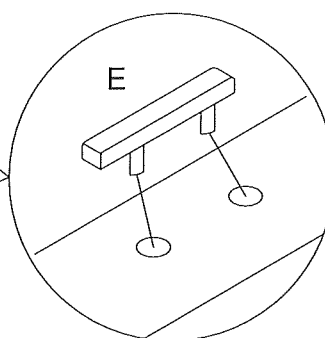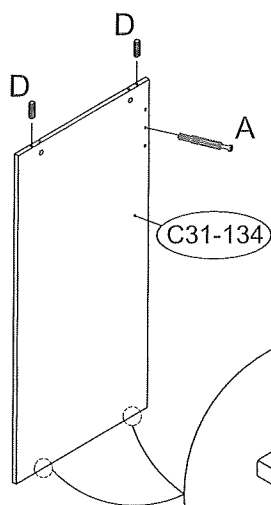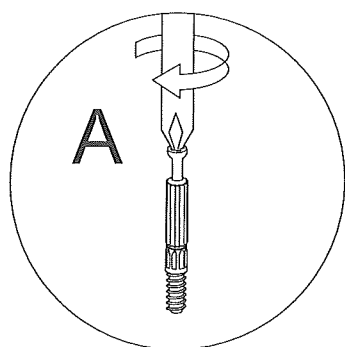



9

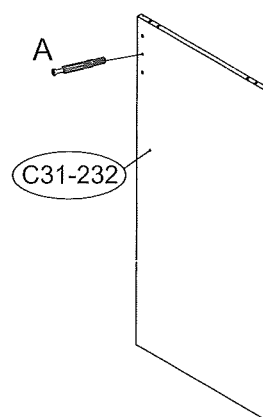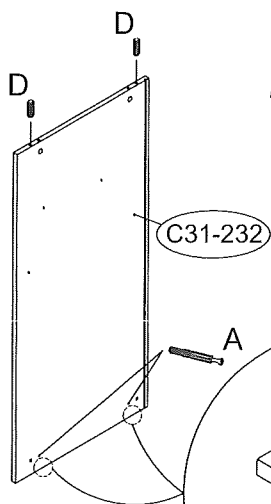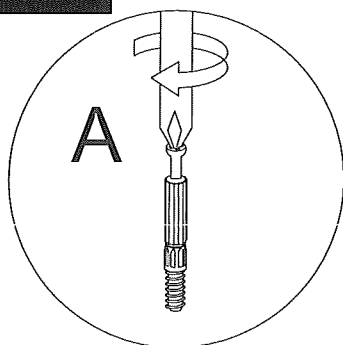    

10

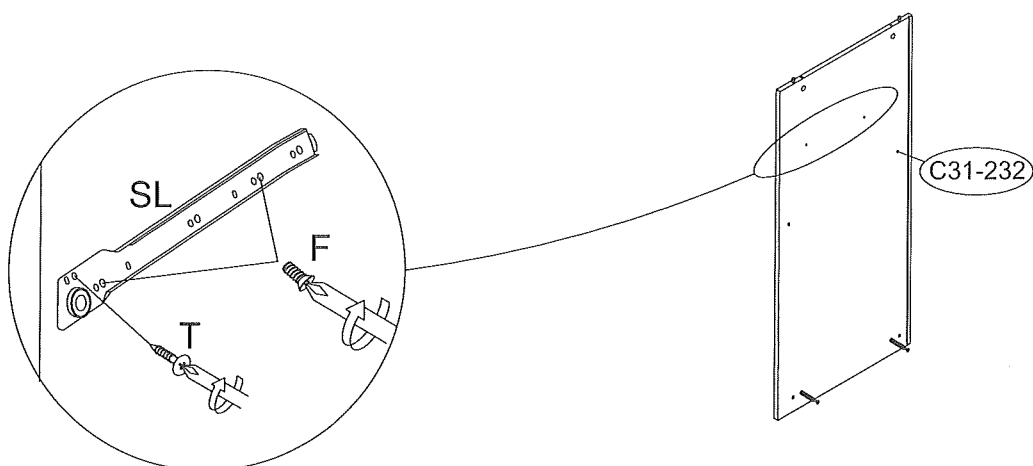  

11

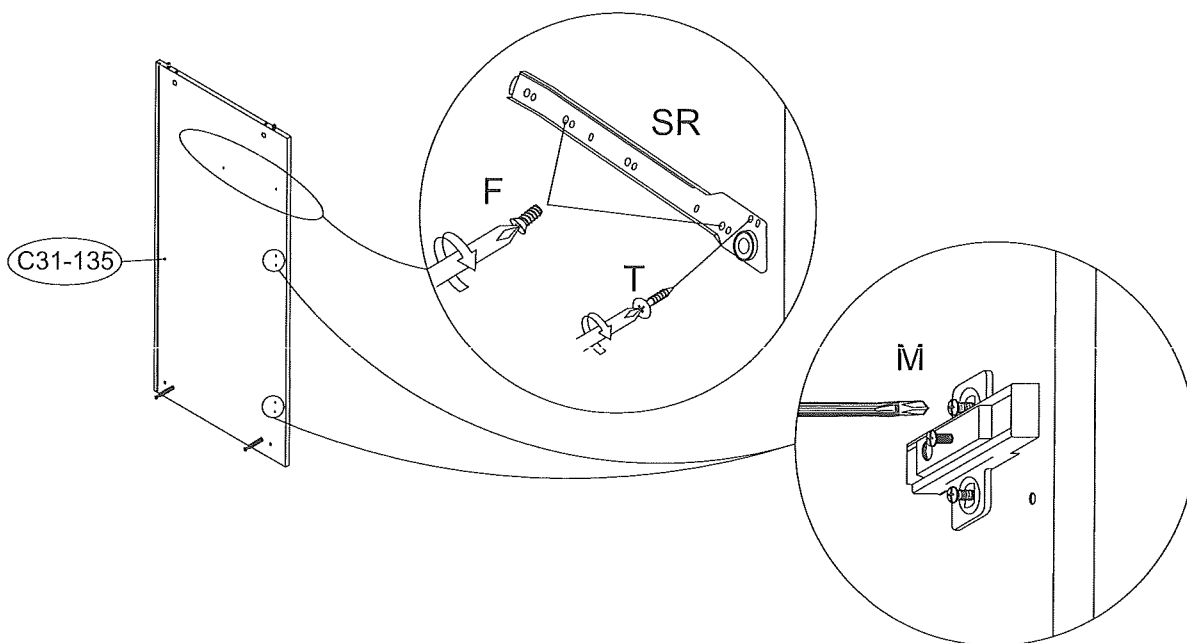  


next

COMPTON DESK




902979

Assembly instructions


 
12

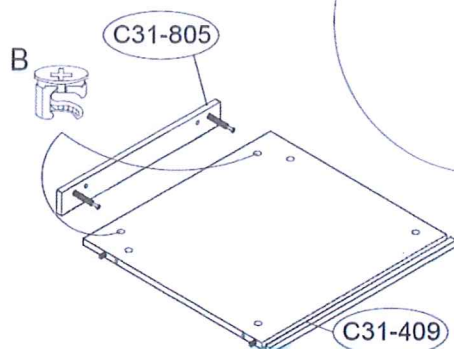

   WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-PILLAR
TURN CLOCKWISE UNTIL SECURE

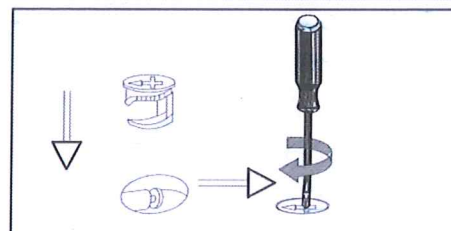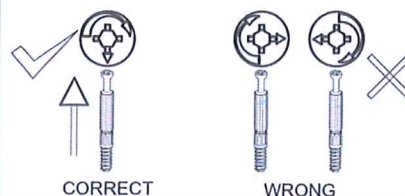

13

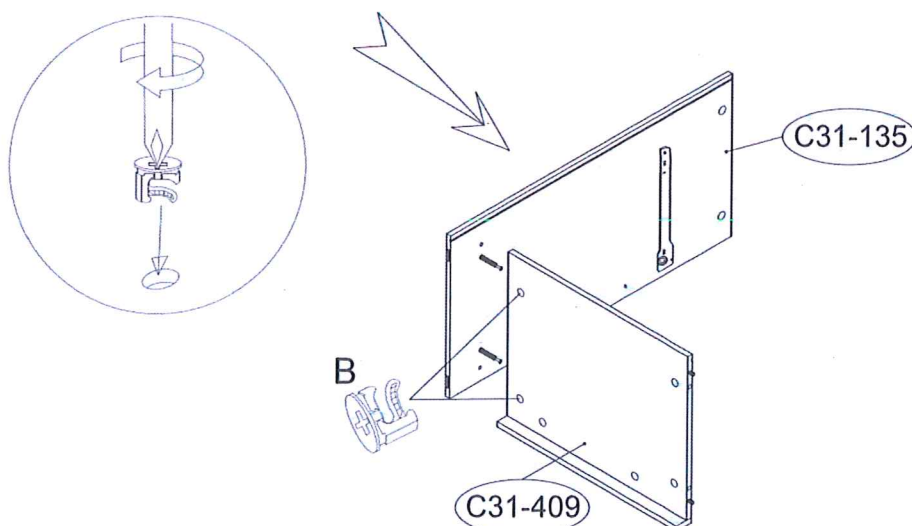  




next

COMPTON DESK





902979

Assembly instructions

   14

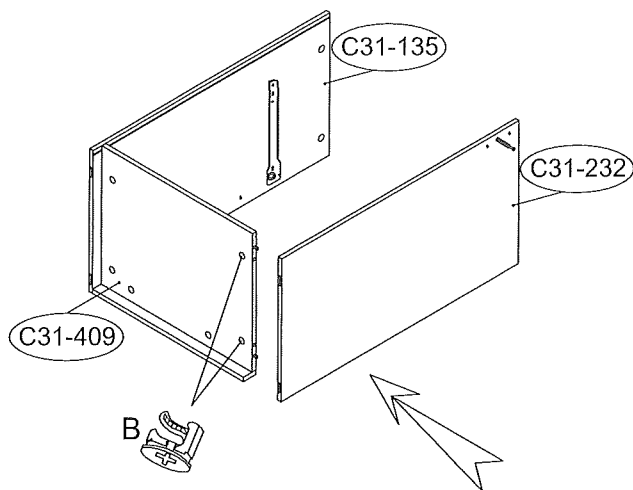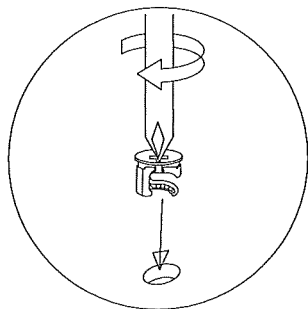

15

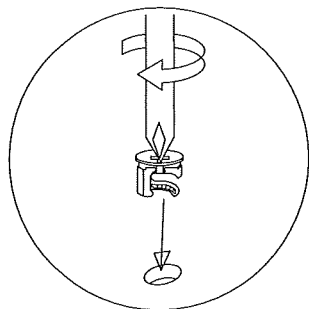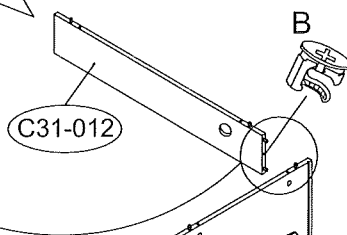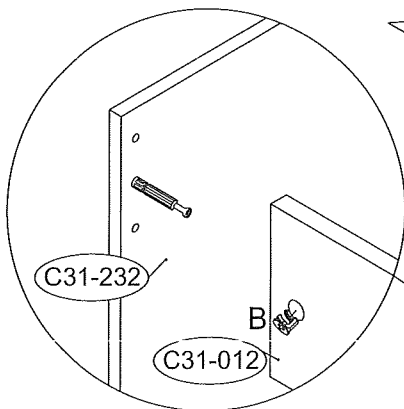    



next

COMPTON DESK


902979

Assembly instructions

  16

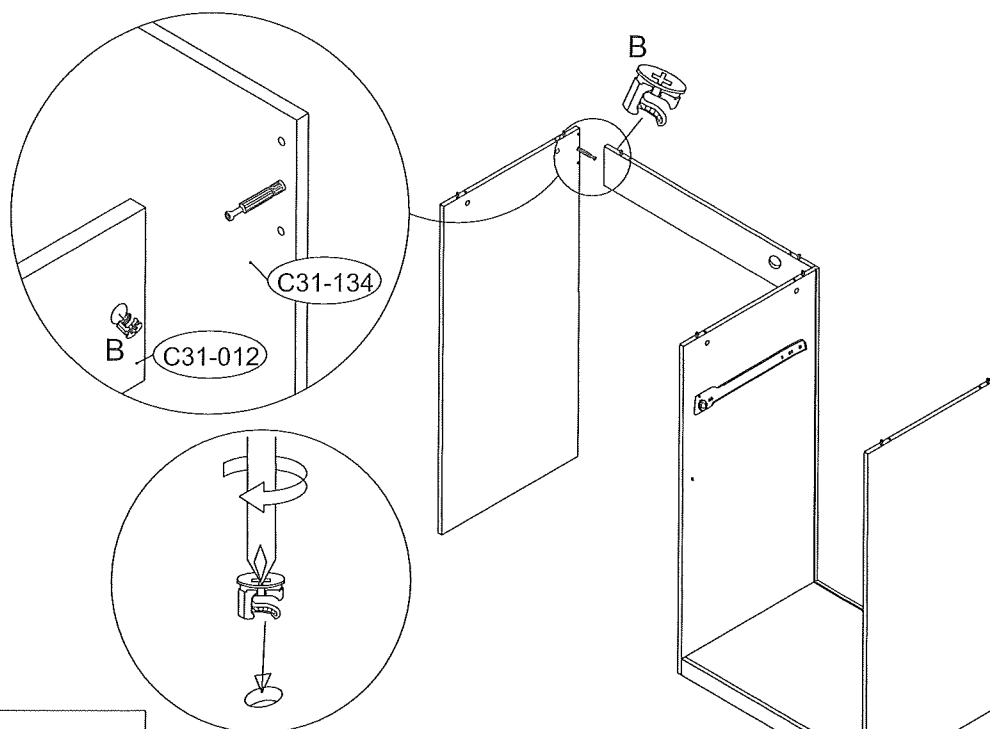




17

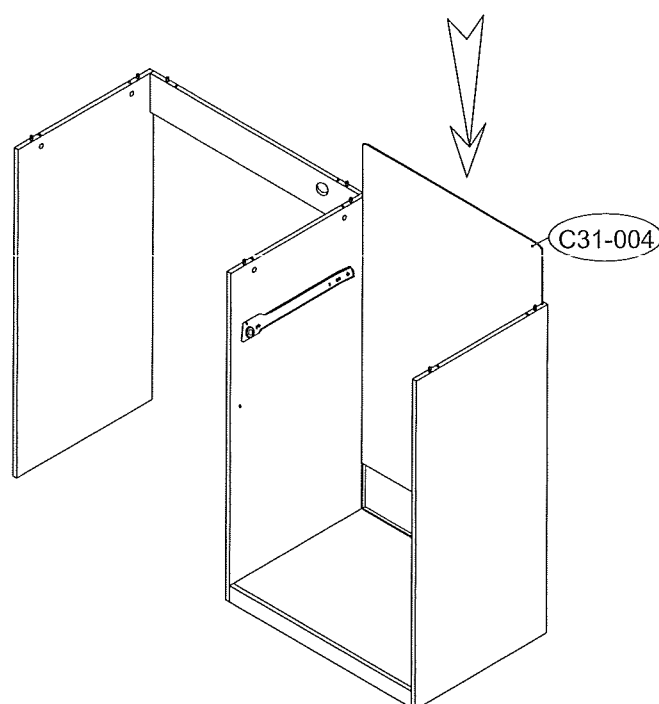 




next

COMPTON DESK
902979
Assembly instructions

   18

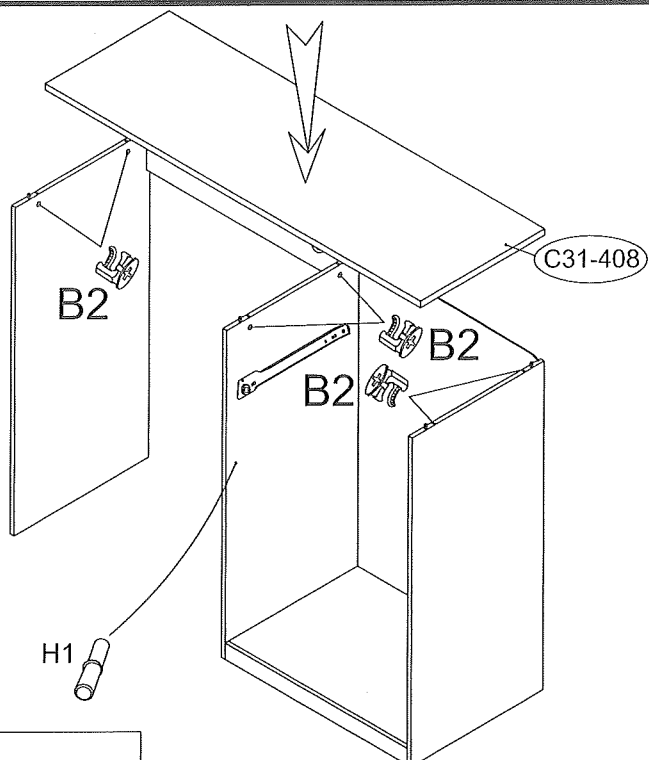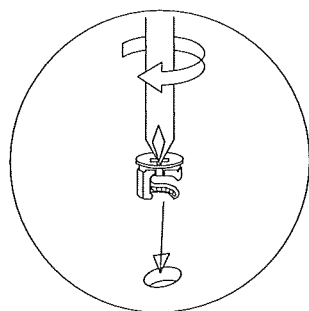

19

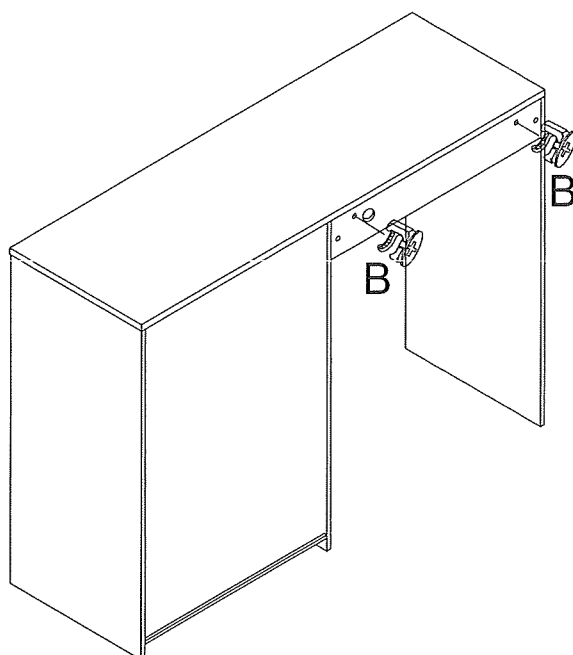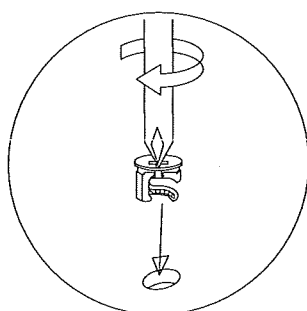   



next

COMPTON DESK


902979

Assembly instructions

  
20

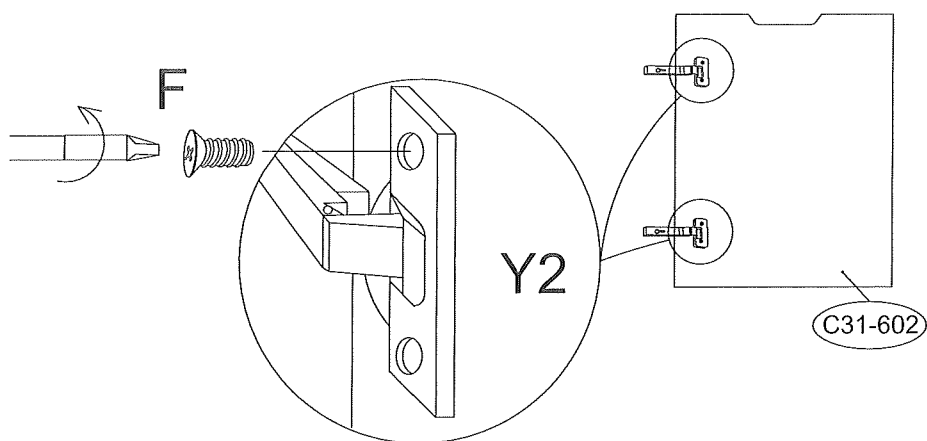


21

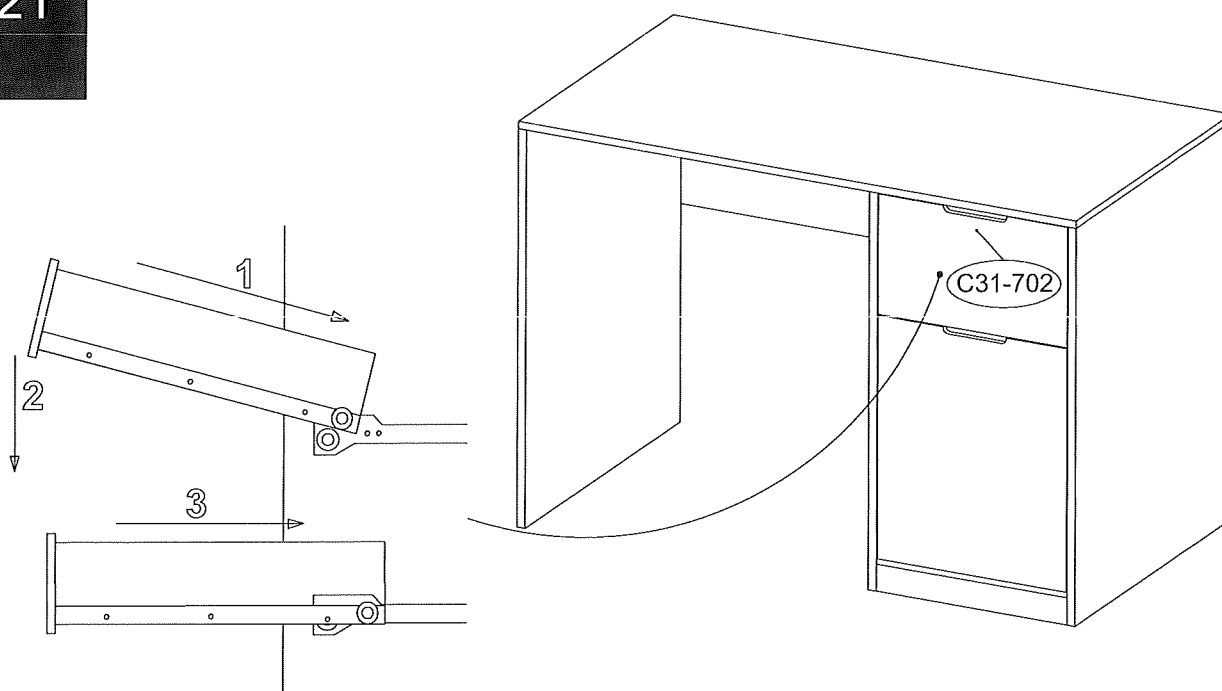 


22

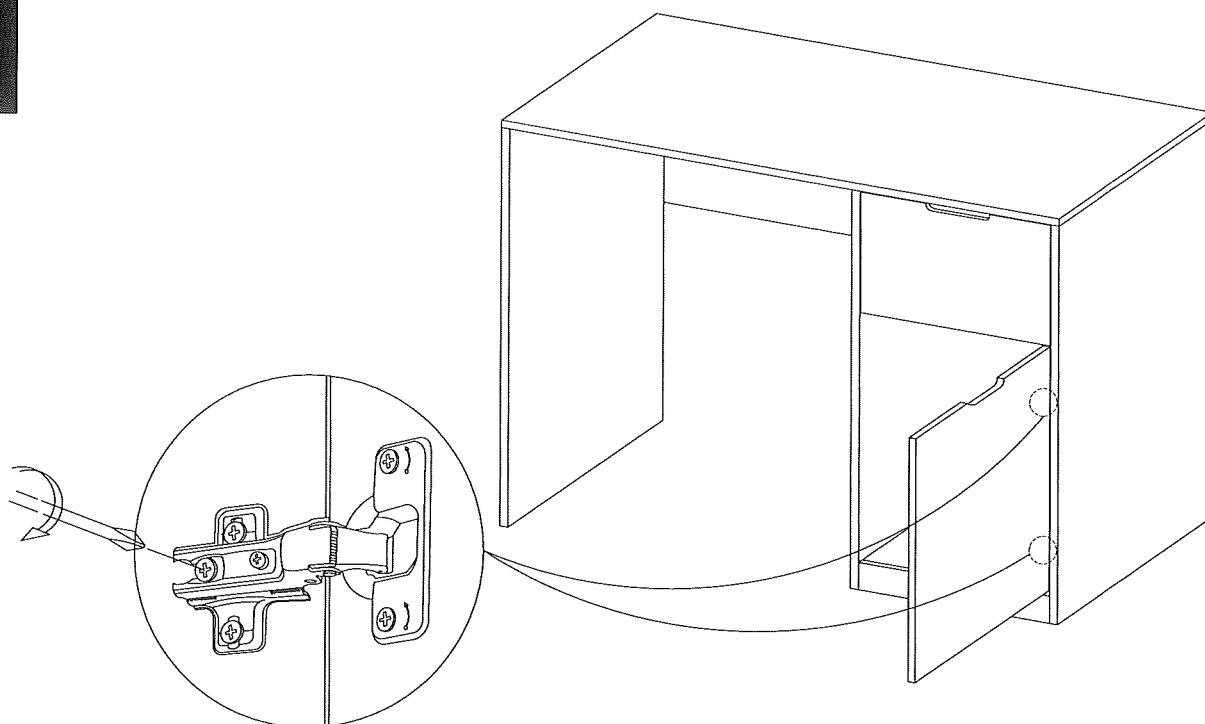 




 
Adjusting the doors (adjusting the hinges)

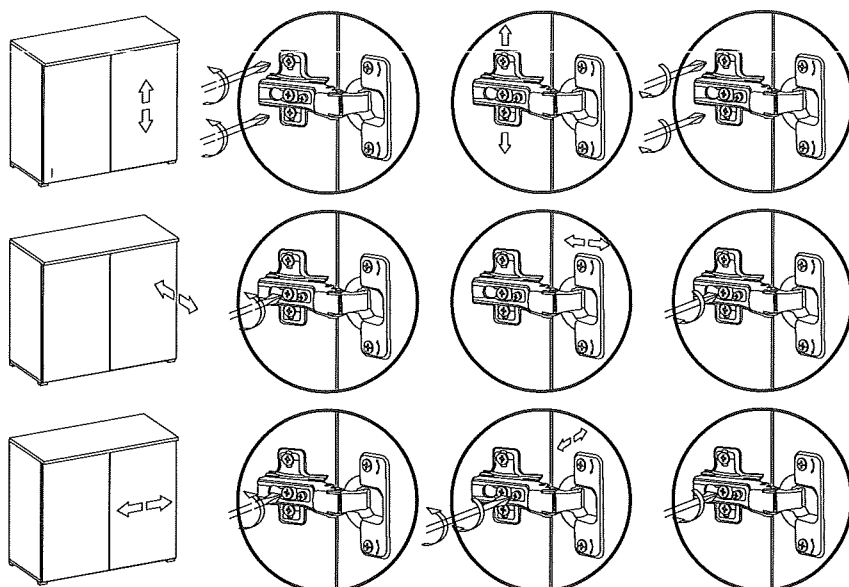






PH2

 



23

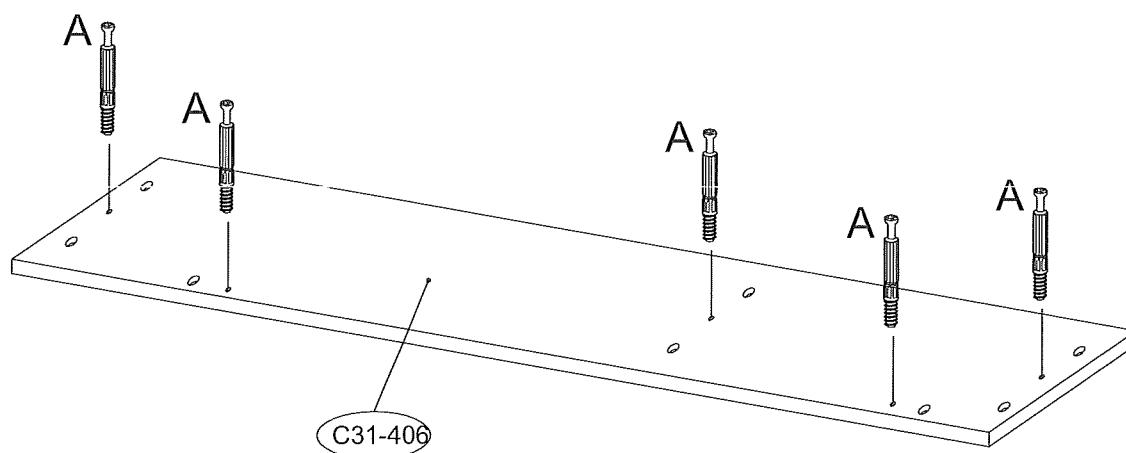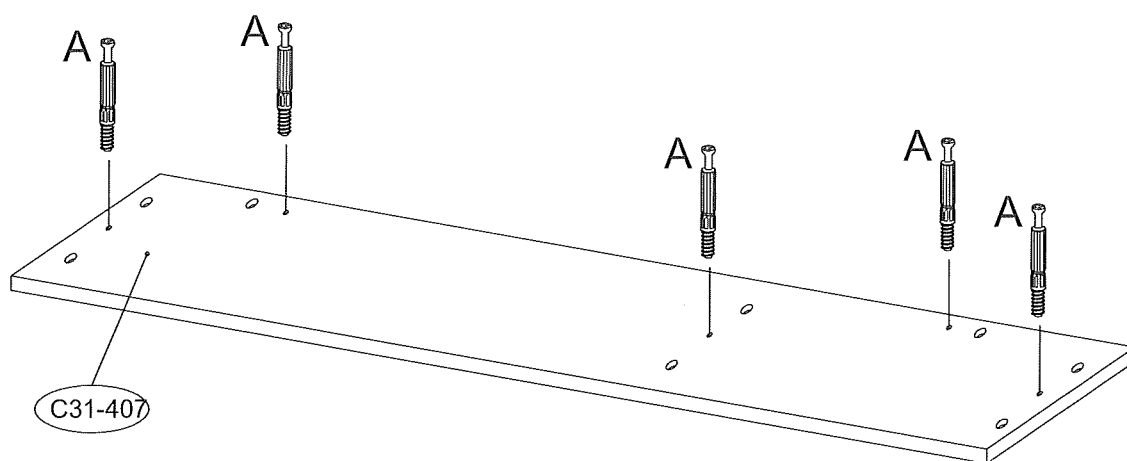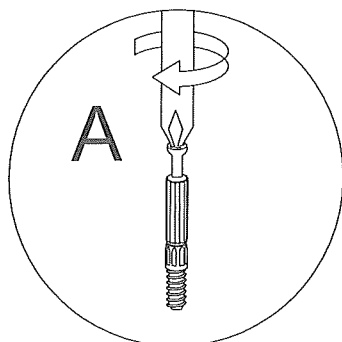    



24

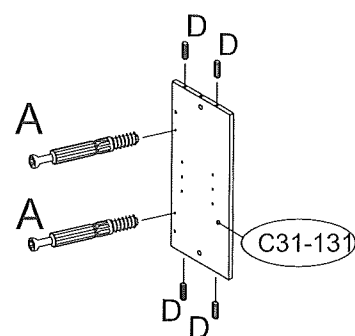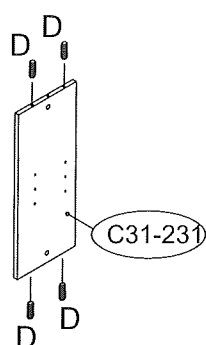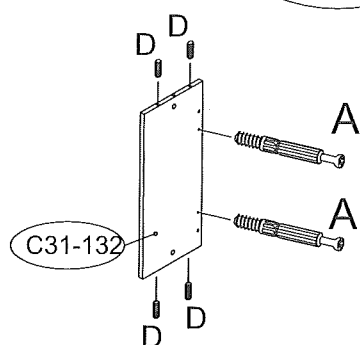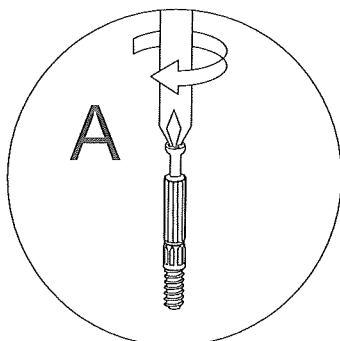     



25

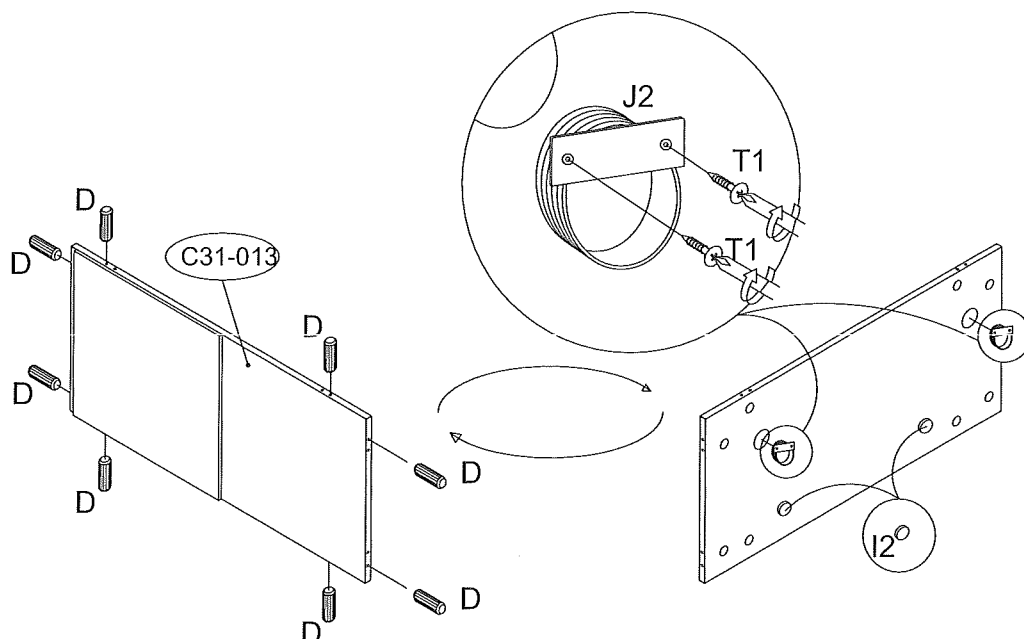  



26

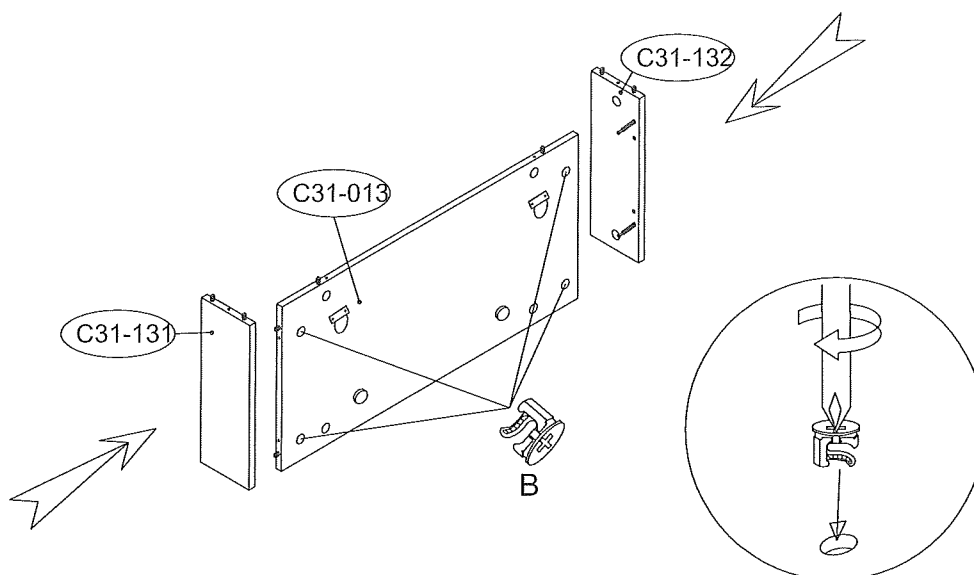  



27

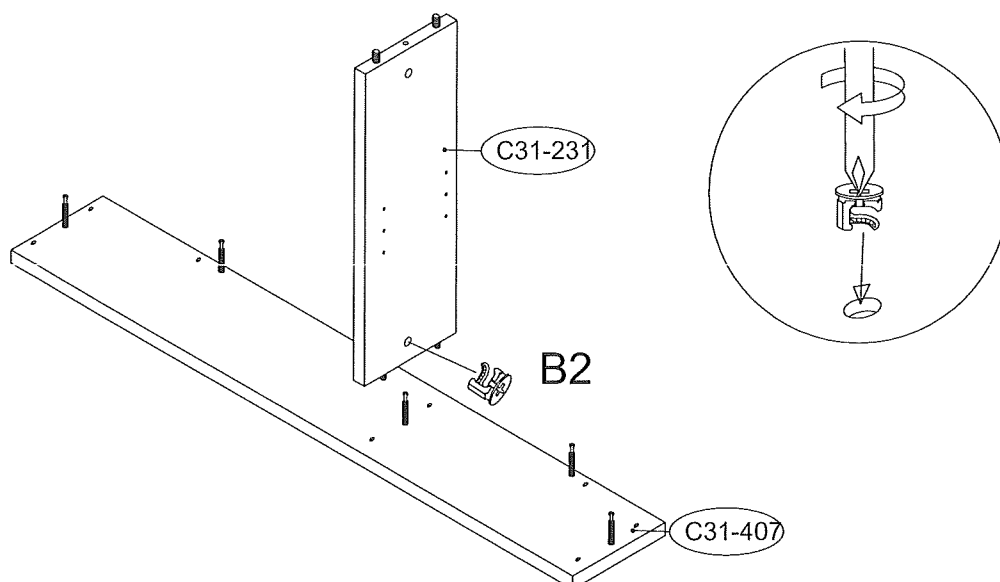  

28

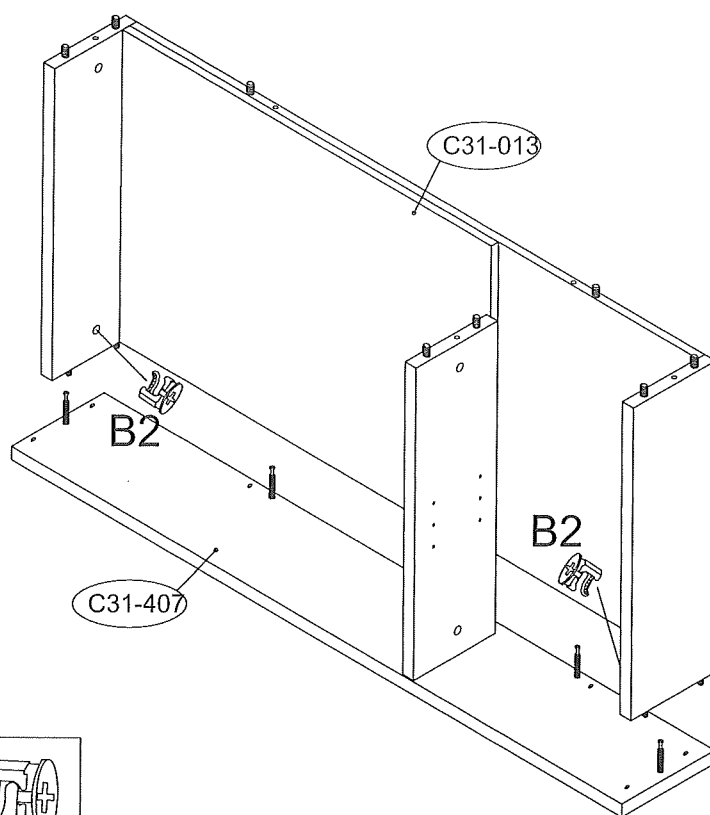  

29

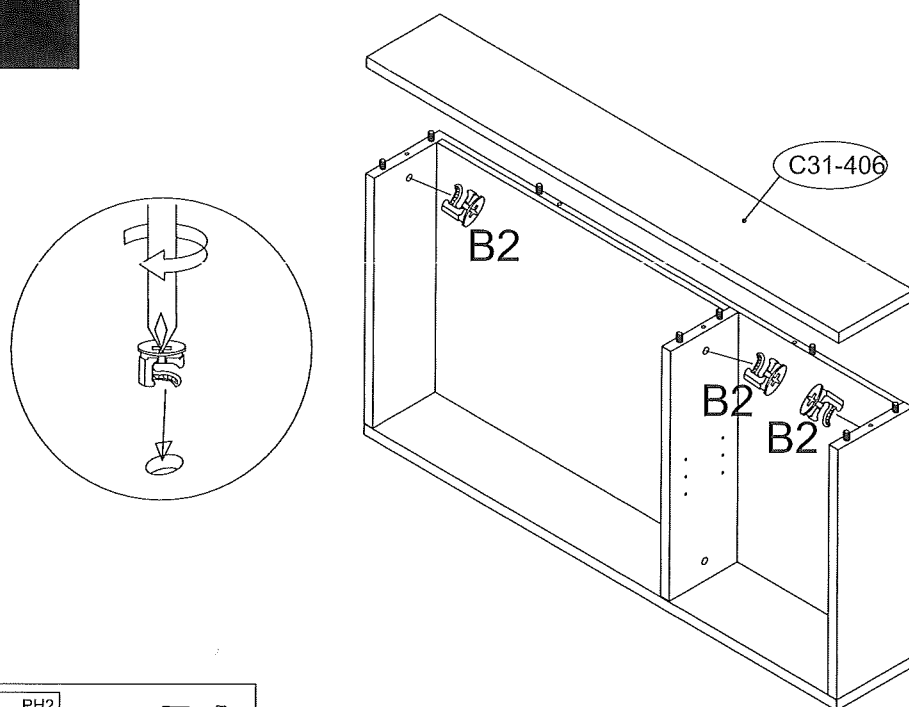  



next

COMPTON DESK


902979

Assembly instructions

  30

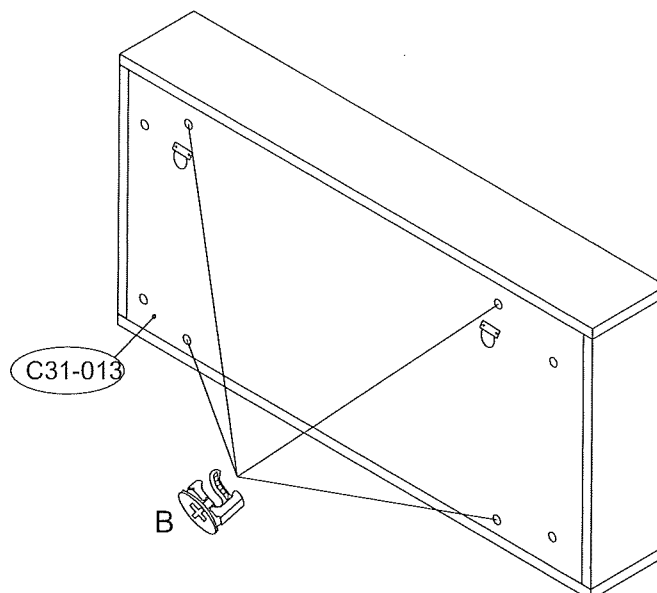

31

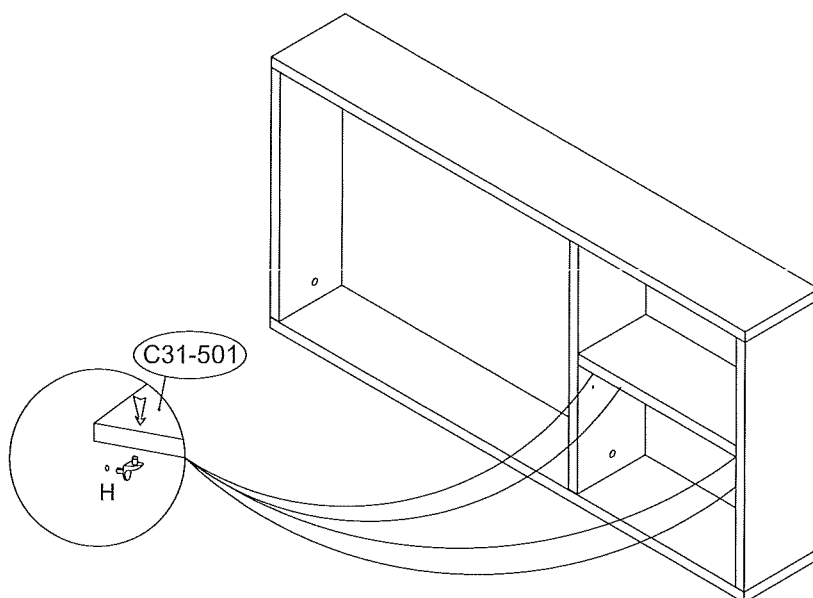 

Hx4



 
 
 
 
 
 
 
 
 
next

COMPTON DESK

902979

Assembly instructions

To use this item safely ensure the top section is wall attached to prevent tipping as shown. Wall fixings are not included so please source suitable fixings for your wall type. If in doubt consult a qualified tradesperson.

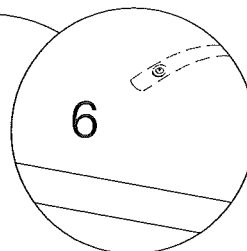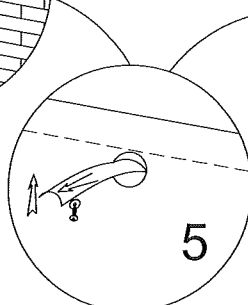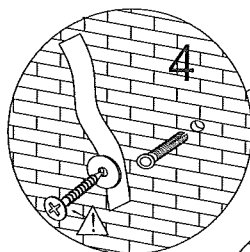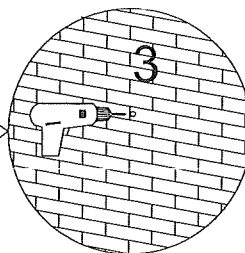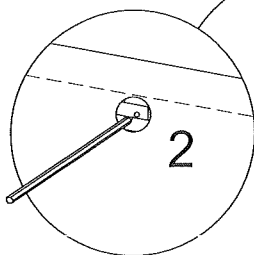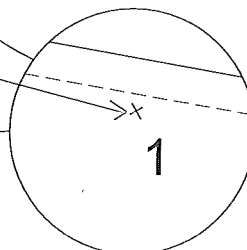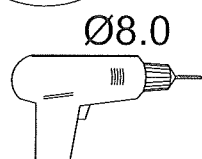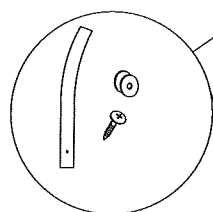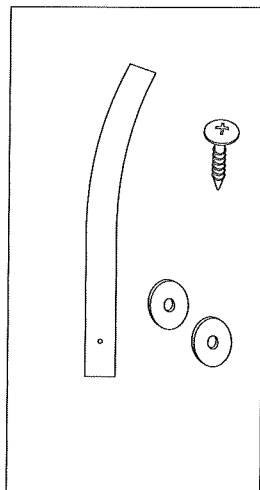

11x1



next

COMPTON DESK

902979

Assembly instructions

Actual product size

H74 x W100 x D45cm

H48 x W100 x D15cm

